



ИБП Eaton 9E 6000i (9E6Ki) - Пользовательское руководство по батарейным модулям Eaton 9E 6000i

Постоянная ссылка на страницу: <https://eaton-power.ru/catalog/eaton-9e/eaton-9e-6000i/>

9EBM240 WIRING CONNECTION

Warning: Please read the UPS user manual before installing the EBM

It is possible to connect more than one EBM in order to achieve any level of autonomy without mains power. Connect any Battery Boxes in a cascade as shown in the figure below:

1. **CONNECTION:** Use 3 cables with 10 mm² section (Earth, +, N and -)
2. Connect the wires to the relative terminals, following exactly the instructions given below:



For 9E15Ki, 9E15KiXL, 9E20Ki, 9E20KiXL

(Must connect Two EBMs as a group)

- a - Make sure that the fuse holder of the external battery box is open.
- b - Connect the earth (PE) wire to EBM's earth (PE) screw
- c - Connect the positive (+) branch wire to 1st EBM's positive (+) terminal.
- d - Connect the neutral (N) wire to 1st EBM negative (-) terminal and 2nd group EBM positive(+) terminal.
- e - Connect the negative (-) branch wire to 2nd EBM's negative (-) terminal.


The suggested tighten force is 1.6Nm.

BATTERY EXTENSION

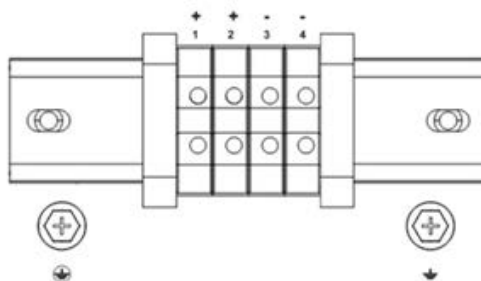
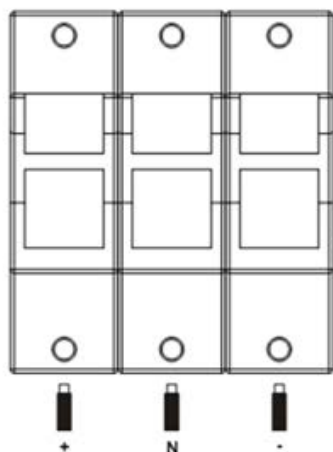


EBM terminal view


Versions 9E15Ki, 9E15KiXL, 9E20Ki, 9E20KiXL

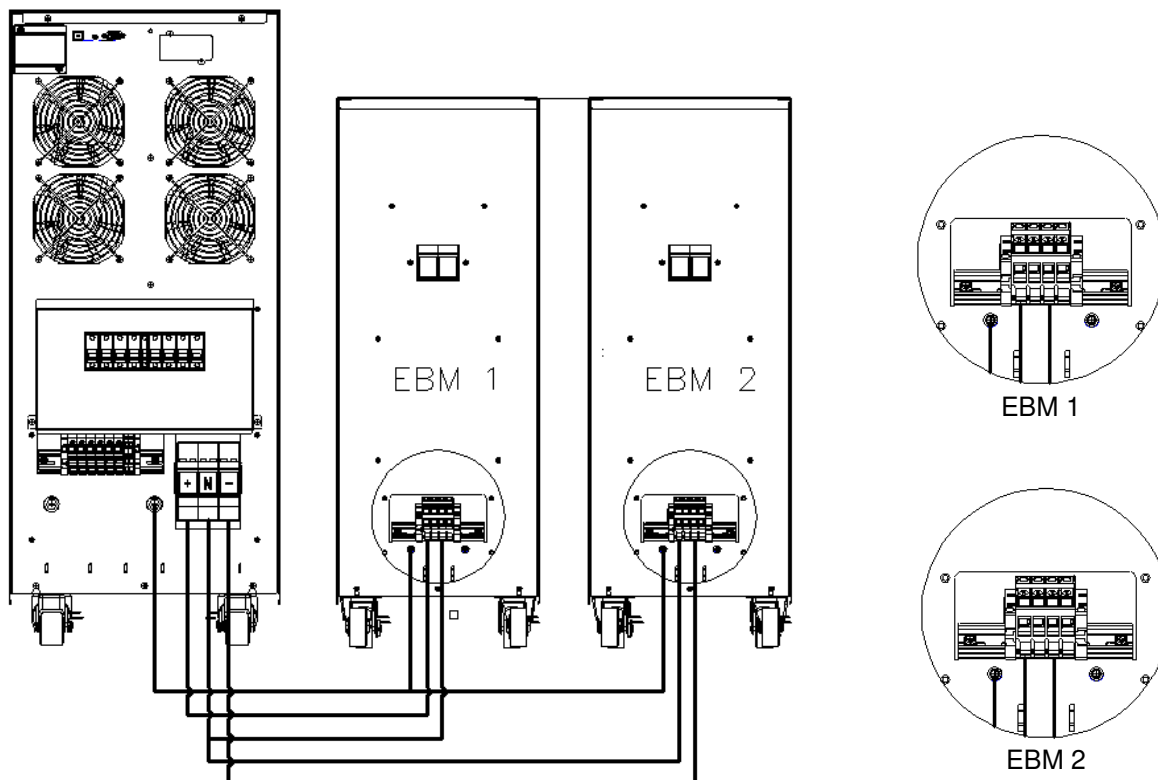


EBM terminal connection for 9E15Ki, 9E15KiXL, 9E20Ki, 9E20KiXL with one EBM group.

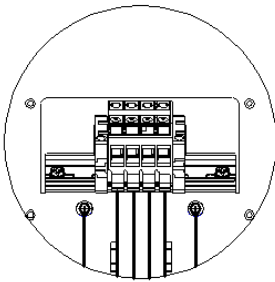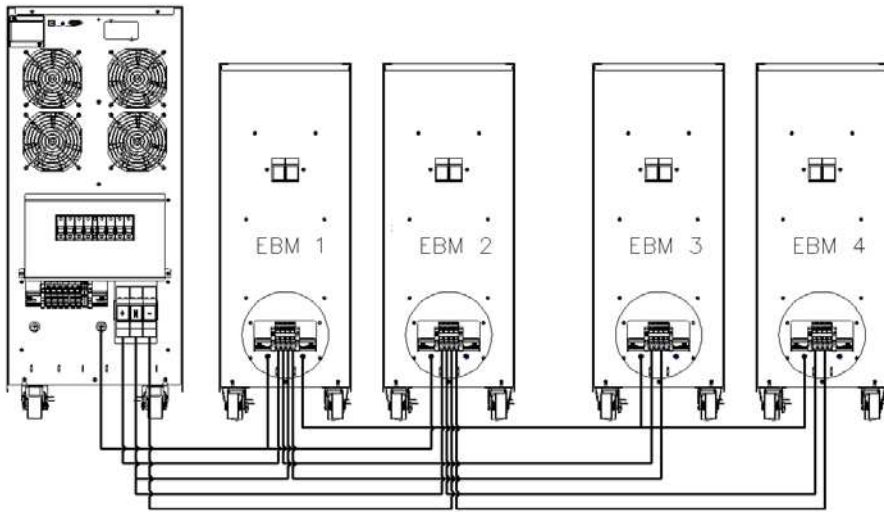


EBM 1

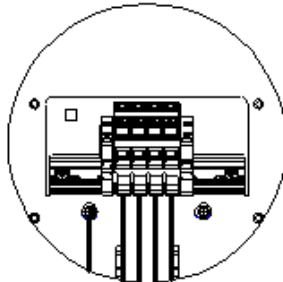

EBM 2

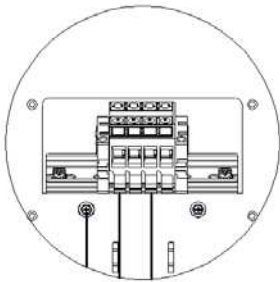

EBM 3

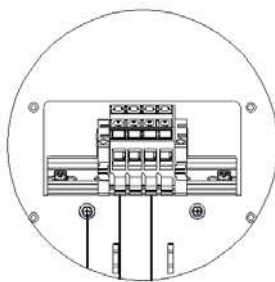

EBM 4

EBM terminal connection for 9E15Ki, 9E15KiXL, 9E20Ki, 9E20KiXL with more than one EBM groups