



TEOS SERIES

(3P/3P)

TEOS 330(XL) TEOS 340(XL)

TEOS 360(XL) TEOS 380(XL)

Online UPS

Uninterruptible Power Supply System



Please comply with all warnings and operating instructions in this manual strictly. Save this manual properly and read carefully the following instructions before installing the unit. Do not operate this unit before reading through all safety information and operating instructions carefully.

Table of Contents

1. SAFETY AND EMC INSTRUCTIONS	1
1-1. TRANSPORTATION AND STORAGE	1
1-2. PREPARATION	1
1-3. INSTALLATION	1
1-4.  CONNECTION WARNINGS	2
1-5. OPERATION	3
1-6. STANDARDS	3
2. INSTALLATION AND OPERATION	4
2-1. UNPACKING AND INSPECTION	4
2-2. WIRING TERMINAL VIEW	5
2-3. SINGLE UPS INSTALLATION	9
2-4. UPS INSTALLATION FOR PARALLEL SYSTEM	12
2-5. SOFTWARE INSTALLATION	14
3. OPERATIONS	15
3-1. BUTTON OPERATION	15
3-2. LED INDICATORS AND LCD PANEL	15
3-3. AUDIBLE ALARM	17
3-4. SINGLE UPS OPERATION	17
3-5. PARALLEL OPERATION	20
3-6. ABBREVIATION MEANING IN LCD DISPLAY	22
3-7. LCD SETTING	22
3-8. OPERATING MODE/STATUS DESCRIPTION	28
3-9. FAULT CODE	33
3-10. WARNING INDICATOR	34
3-11. WARNING CODE	34
4. TROUBLE SHOOTING	35
5. STORAGE AND MAINTENANCE	37
5-1. STORAGE	37
5-2. MAINTENANCE	37
6. SPECIFICATIONS	38

1. Safety and EMC instructions

Please read carefully the following user manual and the safety instructions before installing the unit or using the unit!

1-1. Transportation and Storage



Please transport the UPS system only in the original package to protect against shock and impact.



The UPS must be stored in the room where it is ventilated and dry.

1-2. Preparation



Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimate the environment.



Do not install the UPS system near water or in moist environments.



Do not install the UPS system where it would be exposed to direct sunlight or nearby heater.



Do not block ventilation holes in the UPS housing.

1-3. Installation



Do not connect appliances or devices which would overload the UPS (e.g. big motor-type equipment)) to the UPS output sockets or terminal.



Place cables in such a way that no one can step on or trip over them.



Do not block air vents in the housing of UPS. The UPS must be installed in a location with good ventilation. Ensure enough space on each side for ventilation.



UPS has provided earthed terminal, in the final installed system configuration, equipotential earth bonding to the external UPS battery cabinets.



The UPS can be installed only by qualified maintenance personnel.



An appropriate disconnect device as short-circuit backup protection should be provided in the building wiring installation.



An integral single emergency switching device which prevents further supply to the load by the UPS in any mode of operation should be provided in the building wiring installation.




Connect the earth before connecting to the building wiring terminal.




Installation and Wiring must be performed in accordance with the local electrical laws and regulations.

1-4.  Connection Warnings

- There is no standard backfeed protection inside of the UPS. However, there are relays located in input to cut off the input line voltage and the neutral is still connect into UPS.

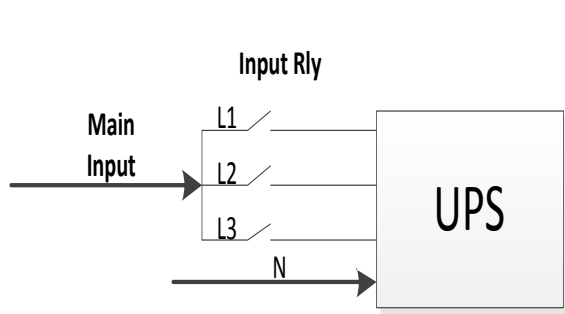

Input relay diagram

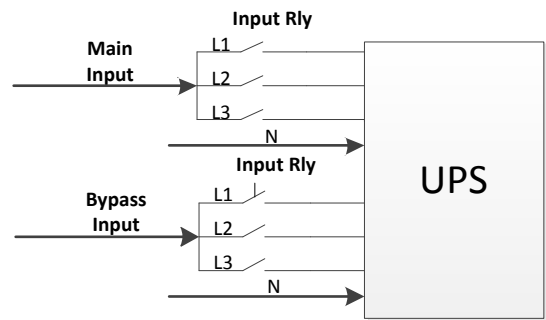

Input relay diagram for dual-input model

- This UPS should be connected with TN earthing system.
- The power supply for this unit must be three-phase rated in accordance with the equipment nameplate. It also must be suitably grounded.

WARNING
HIGH LEAKAGE CURRENT
EARTH CONNECTION ESSENTIAL
BEFORE CONNECTING SUPPLY

- Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.
- **Connect your UPS power module's grounding terminal to a grounding electrode conductor.**
- This is a product for commercial and industrial application in the second environment – installation restriction or additional measures may be needed to prevent disturbances.
- In accordance with safety standard EN-IEC 62040-1, installation has to be provided with a «Backfeed Protection» system, as for example a contactor, which will prevent the appearance of voltage or dangerous energy in the input mains during a mains fault (see figure 24 and respect the wiring diagram of «Backfeed Protection» depending if the equipment is with signal or three phase input).




There can be no derivation in the line that goes from the «Backfeed Protection» to the UPS, as the standard safety would be infringed.

- Warning labels should be placed on all primary power switches installed in places away from the device to alert the electrical maintenance personnel of the presence of a UPS in the circuit. The label will bear the following or an equivalent text:

Before working on this circuit

- Isolate Uninterruptible Power Supply (UPS)
- Then check for Hazardous Voltage between all terminals including the protected earth

 Risk of Voltage Backfeed

1-5. Operation



Do not disconnect the earth conductor cable on the UPS or the building wiring terminals in any time since this would cancel the protective earth of the UPS system and of all connected loads.



The UPS system features its own, internal current source (batteries). The UPS output sockets or output terminal blocks may be electrically live even if the UPS system is not connected to the building wiring outlet. (only for standard models)



In order to fully disconnect the UPS system, first press the "OFF" button and then disconnect the mains.



Ensure that no liquid or other foreign objects can enter into the UPS system.



The UPS can be operated by any individuals with no previous experience.

1-6. Standards

* Safety	
IEC/EN 62040-1	
* EMI	
Conducted Emission.....: IEC/EN 62040-2	Category C3
Radiated Emission.....: IEC/EN 62040-2	Category C3
* EMS	
ESD.....: IEC/EN 61000-4-2	Level 4
RS.....: IEC/EN 61000-4-3	Level 3
EFT.....: IEC/EN 61000-4-4	Level 4
SURGE.....: IEC/EN 61000-4-5	Level 4
CS.....: IEC/EN 61000-4-6	Level 3
Power-frequency Magnetic field.....: IEC/EN 61000-4-8	Level 4
Low Frequency Signals.....: IEC/EN 61000-2-2	
Warning: This is a product for commercial and industrial application in the second environment-installation restrictions or additional measures may be needed to prevent disturbances.	

2. Installation and Operation

These series are with two VAC systems: 208V and 400V. There are two different types of online UPS: standard and long-run models. Please refer to the following model table.

VAC System	Model	Type	Model	Type
208V	LV 15K/20K	Standard model	LV 15KL/ LV 20KL LV 15KL/LV 20KL DUAL	Long-run model
	LV 15K/20K DUAL		LV 30KL/ LV 40KL LV 30KL/LV 40KL DUAL	
400V	TEOS XL 30K/40K		HV 30KL/HV 40KL HV 30KL/HV 40KL DUAL	
	HV 30K/40K DUAL		HV 60KL/ HV 80KL HV 60KL/HV 80KL DUAL	

We also offer optional parallel function for these two types by request. The UPS with parallel function is called as **"Parallel model"**. We have described detailed installation and operation of Parallel Model in the following chapter.

2-1. Unpacking and Inspection

Unpack the package and check the package contents. The shipping package contains:

- One UPS
- One user manual
- **One monitoring software CD**
- One RS-232 cable (option)
- One USB cable
- One parallel cable (only available for parallel model)
- One share current cable (only available for parallel model)

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged during transportation. Do not turn on the unit and notify the carrier and dealer immediately if there is any damage or lacking of some parts. Please keep the original packages in a safe place for future use. It is recommended to keep each equipment and battery set in their original packages because they have been designed to assure the maximum protection during transportation and storage.

2-2. Wiring Terminal View

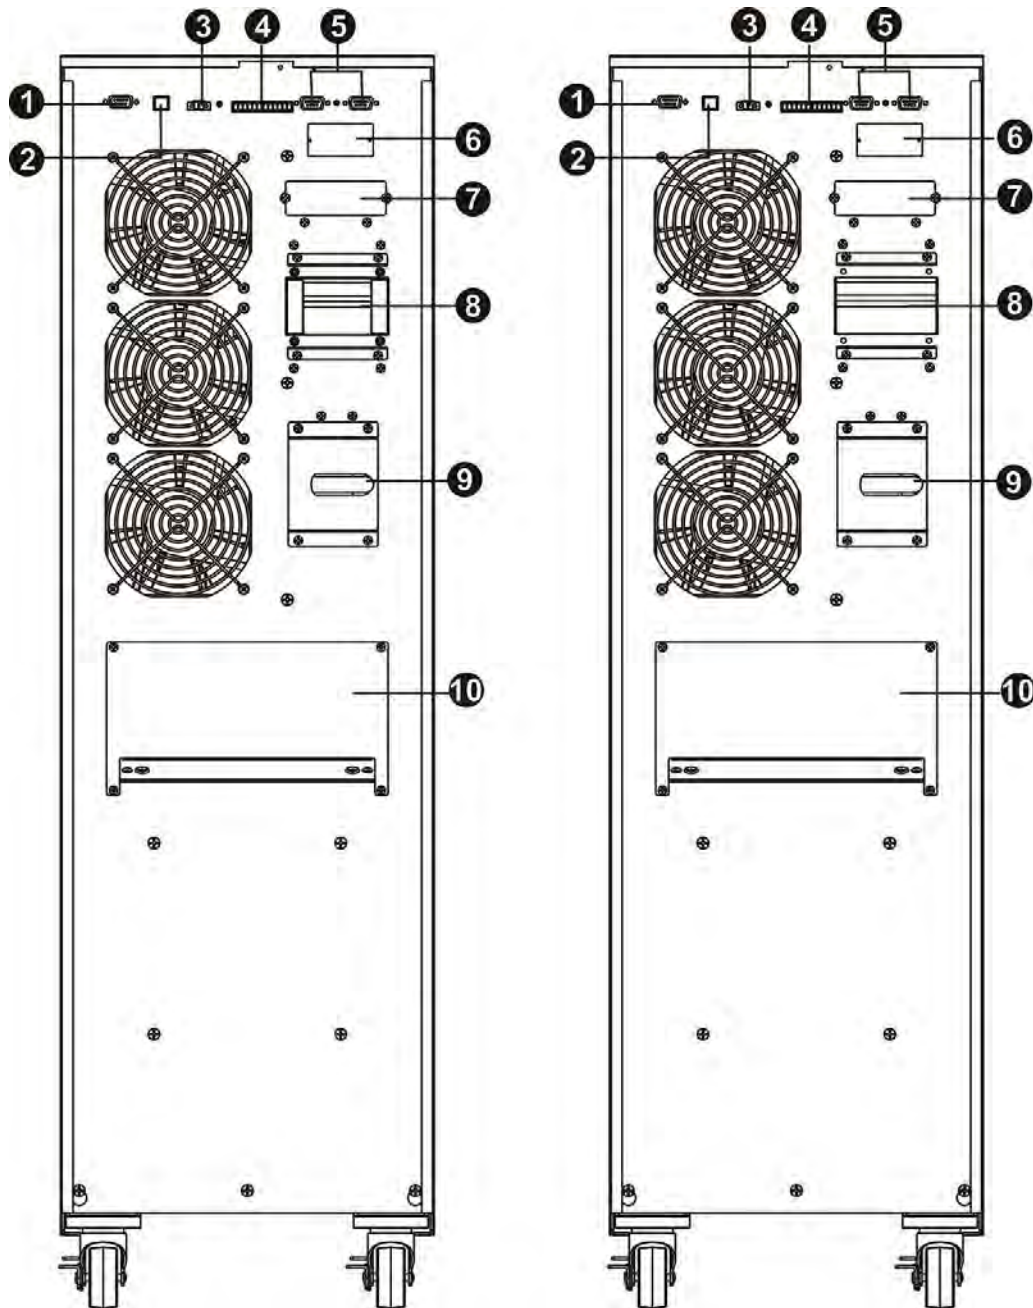


Diagram 1: HV 30K(L)/LV 15K(L) Rear Panel Diagram 2: HV 40K(L)/LV 20K(L) Rear Panel

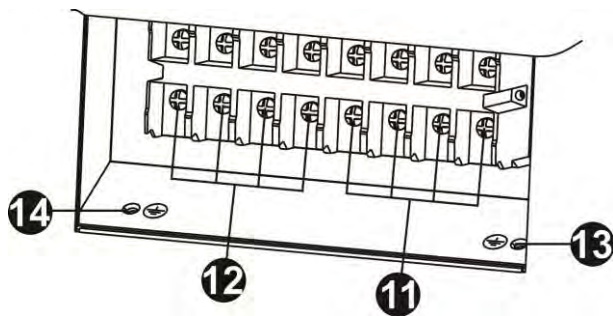


Diagram 3: HV 30K(L)/LV 15K(L)/ HV 40K(L)/LV 20K(L) Input/Output Terminal

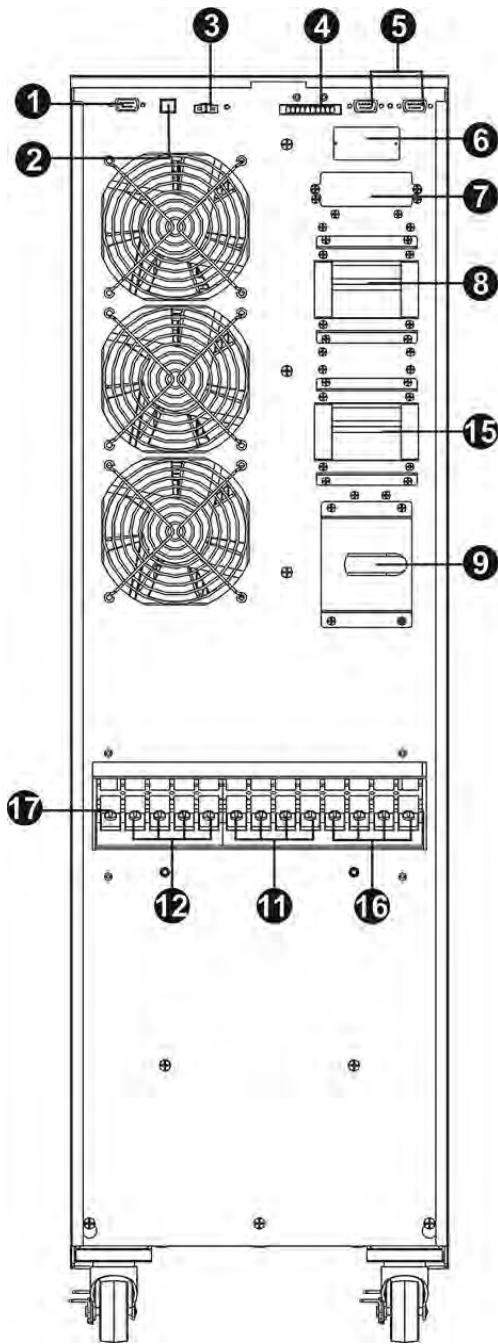


Diagram 4: HV 30K(L) DUAL/LV 15K(L) DUAL
Rear Panel

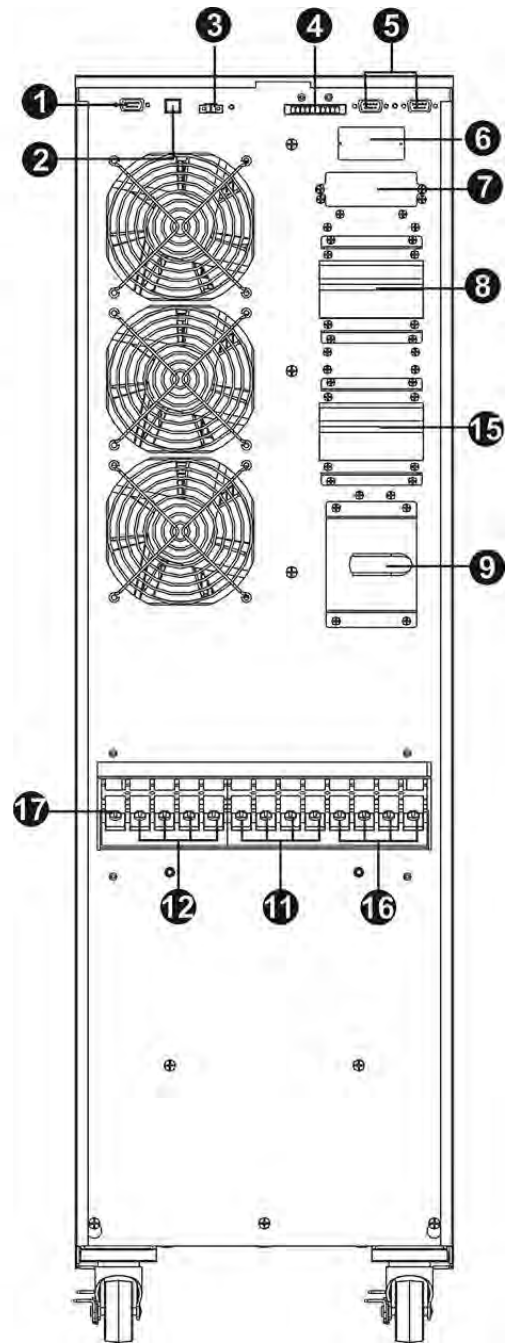


Diagram 5: HV 40K(L) DUAL/LV 20K DUAL
Rear Panel

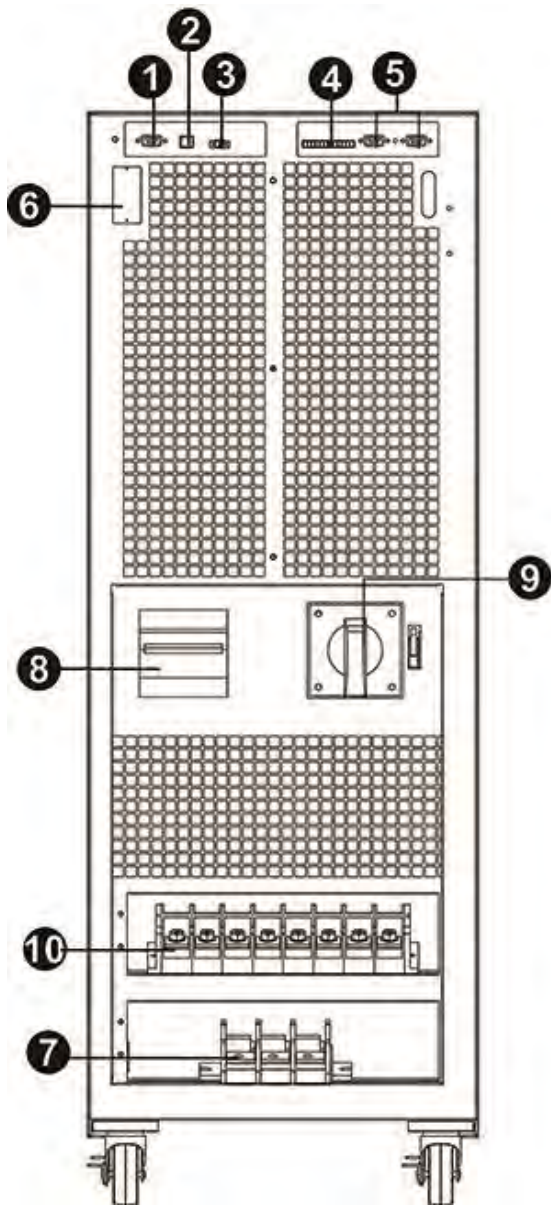


Diagram 6: HV 60KL/LV 30KL front view
with door open

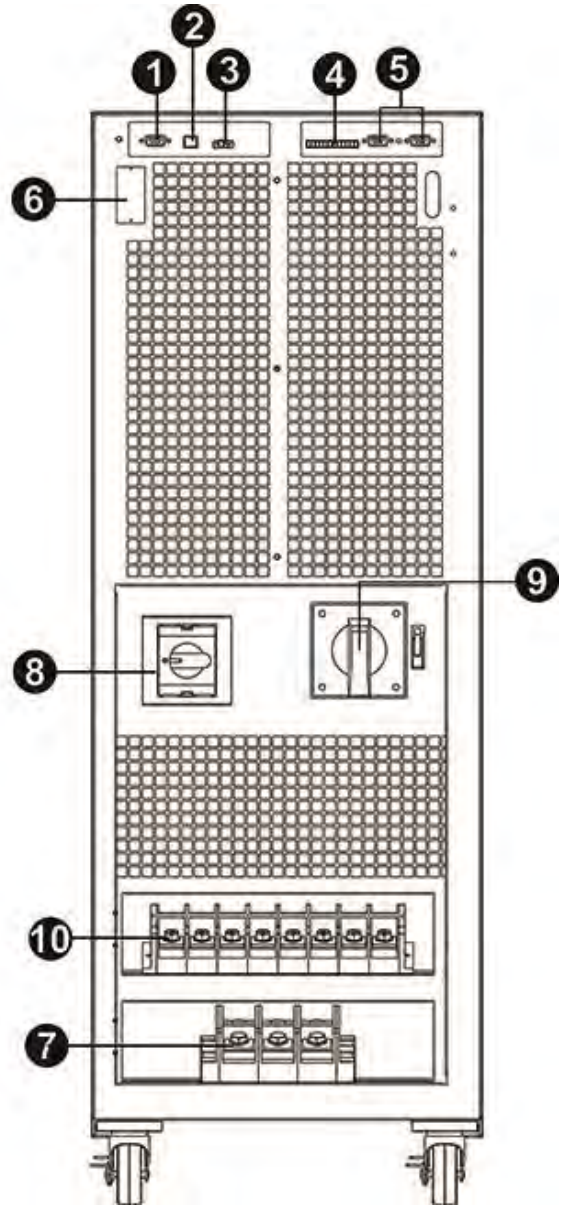


Diagram 7: HV 80KL/LV 40KL front view
with door open

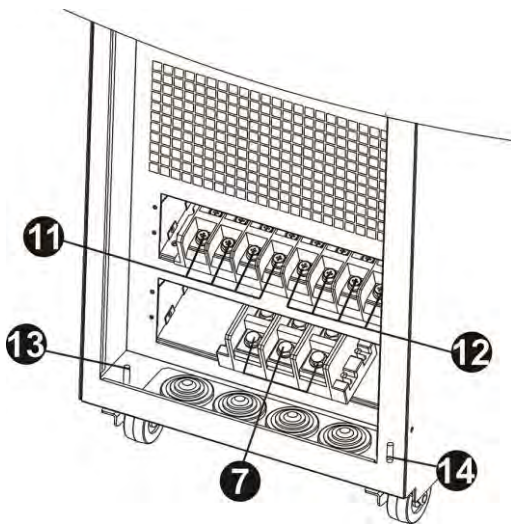


Diagram 8: HV 60KL/HV 80KL/LV 30KL/LV 40KL
Input/Output terminal

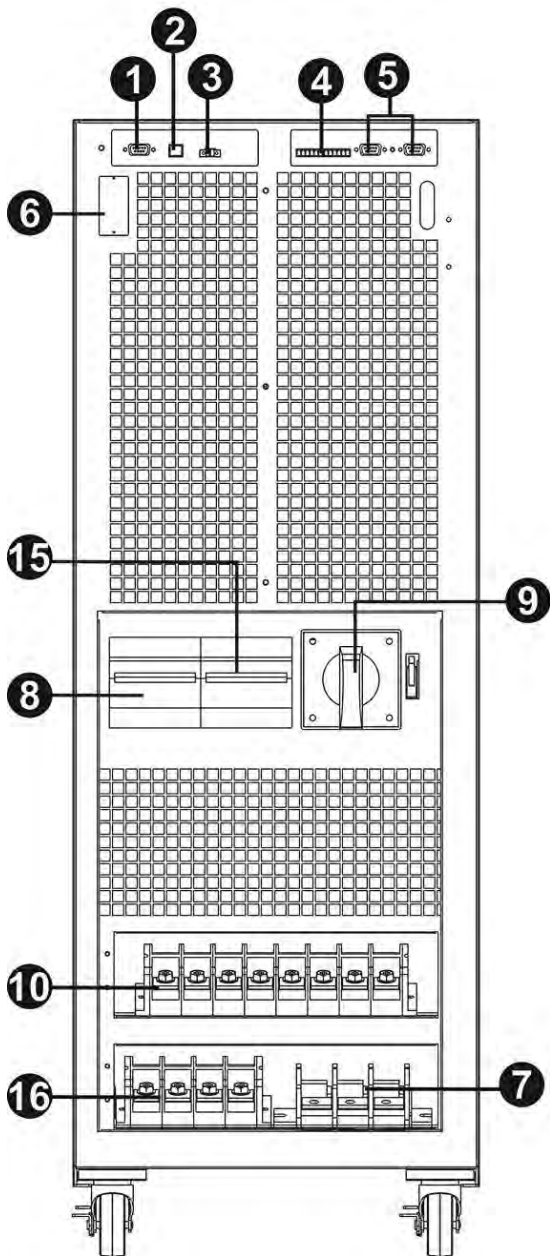


Diagram 9: HV 60KL DUAL/LV 30KL DUAL
front view with door open

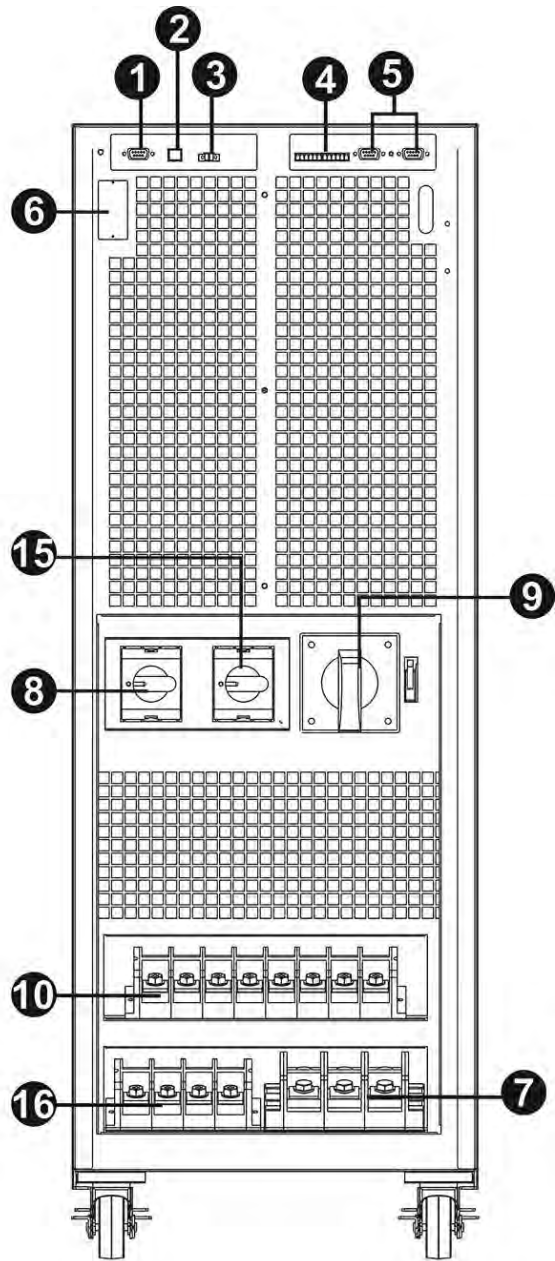


Diagram 10: HV 80KL DUAL/LV 40KL DUAL
front view with door open

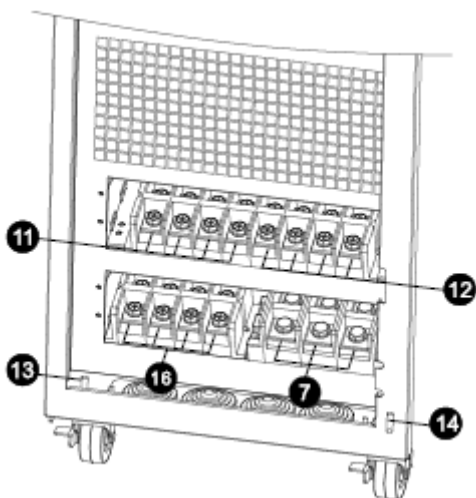


Diagram 11: HV 60KL/LV 30KL/HV 80KL/LV40K DUAL Input /Output terminal

1. RS-232 communication port
2. USB communication port
3. Emergency power off function connector (EPO connector)
4. Share current port (only available for parallel model)
5. Parallel port (only available for parallel model)
6. Intelligent slot
7. External battery connector/terminal (Only available for long-run model)
8. Line input circuit breaker/switch
9. Maintenance bypass switch (option)
10. Input/Output terminal (Refer to diagram 3, 8 and 11 for the details)
11. Line input terminal
12. Output terminal
13. Input grounding terminal
14. Output grounding terminal
15. Bypass input circuit breaker/switch
16. Bypass input terminal
17. Grounding terminal

2-3. Single UPS Installation

Installation and wiring must be performed in accordance with the local electric laws/regulations and execute the following instructions by professional personnel.

- 1) Make sure the mains wire and breakers in the building are enough for the rated capacity of UPS to avoid the hazards of electric shock or fire.

NOTE: Do not use the wall receptacle as the input power source for the UPS, as its rated current is less than **the UPS's maximum input current. Otherwise the receptacle may be burned and destroyed.**

- 2) Switch off the mains switch in the building before installation.
- 3) Turn off all the connected devices before connecting to the UPS.
- 4) Prepare wires based on the following table:

Model	Wiring spec (AWG)				
	Input(Ph)	Output(Ph)	Neutral	Battery	Ground
LV 15K/LV 15K DUAL HV 30K/ HV 30K DUAL	8	8	4	/	4
LV 15KL / LV 15KL DUAL HV 30KL / HV 30KL DUAL	8	8	4	4	4
LV 20K / LV 20K DUAL HV 40K / HV 40K DUAL	6	6	4	/	4
LV 20KL / LV 20KL DUAL HV 40KL / HV 40KL DUAL	6	6	4	4	4
LV 30KL / LV 30KL DUAL HV 60KL / HV 60KL DUAL	4	4	1	1	4
LV 40KL / LV 40KL DUAL HV 80KL / HV 80KL DUAL	2	2	1/0	1/0	2

NOTE 1: The cable for HV 30K(L), HV 30K(L) DUAL, LV 15K(L) and LV 15K(L) DUAL should be able to withstand over 63A current. It is recommended to use AWG 8 or thicker wire for Phase and AWG 4 or thicker wire for Neutral for safety and efficiency.


NOTE 2: The cable for HV 40K(L), HV 40K(L) DUAL, LV 20K(L) and LV 20K(L) DUAL should be able to withstand over 80A current. It is recommended to use AWG 6 or thicker wire for Phase and AWG 4 or thicker wire for Neutral for safety and efficiency.

NOTE 3: The cable for HV 60KL, HV 60KL DUAL, LV 30KL and LV 30KL DUAL should be able to withstand over 122A current. It is recommended to use AWG 4 or thicker wire for Phase and AWG 1 or thicker wire for Neutral for safety and efficiency.


NOTE 4: The cable for HV 80KL, HV 80KL DUAL, LV 40KL and LV 40KL DUAL should be able to withstand over 160A current. It is recommended to use AWG 2 or thicker wire for Phase and AWG 1/0 or thicker wire for Neutral for safety and efficiency.

NOTE 5: The selections for color of wires should be followed by the local electrical laws and regulations.


5) Remove the terminal block cover on the rear panel of UPS. Then connect the wires according to the following terminal block diagrams: (Connect the earth wire first when making wire connection. Disconnect the earth wire last when making wire disconnection!)

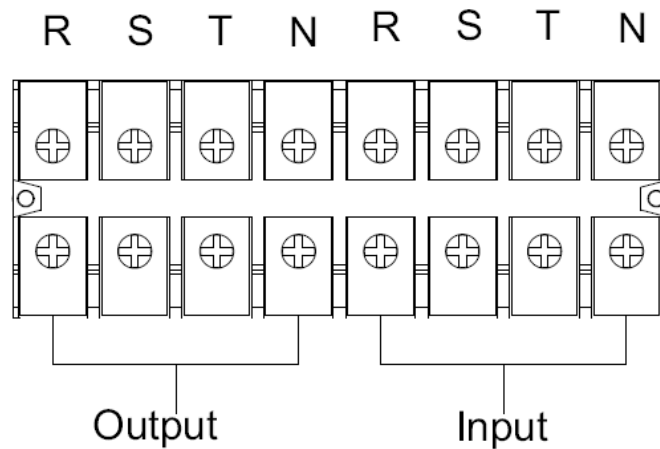


Terminal block wiring diagram for HV 30K(L)/40K(L) and LV 15K(L)/20K(L)

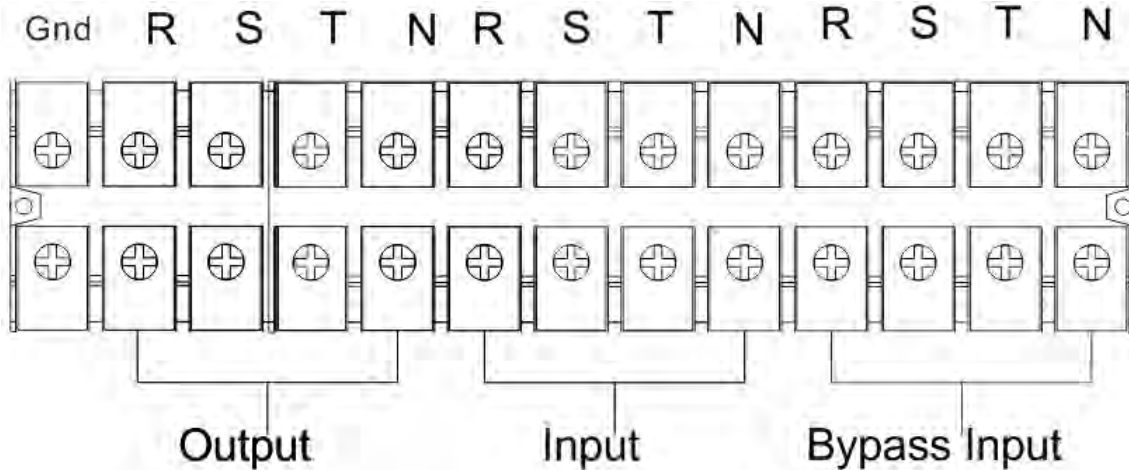


Terminal block wiring diagram for HV 30K(L) /40K(L) and LV 15K(L)/20K(L) DUAL

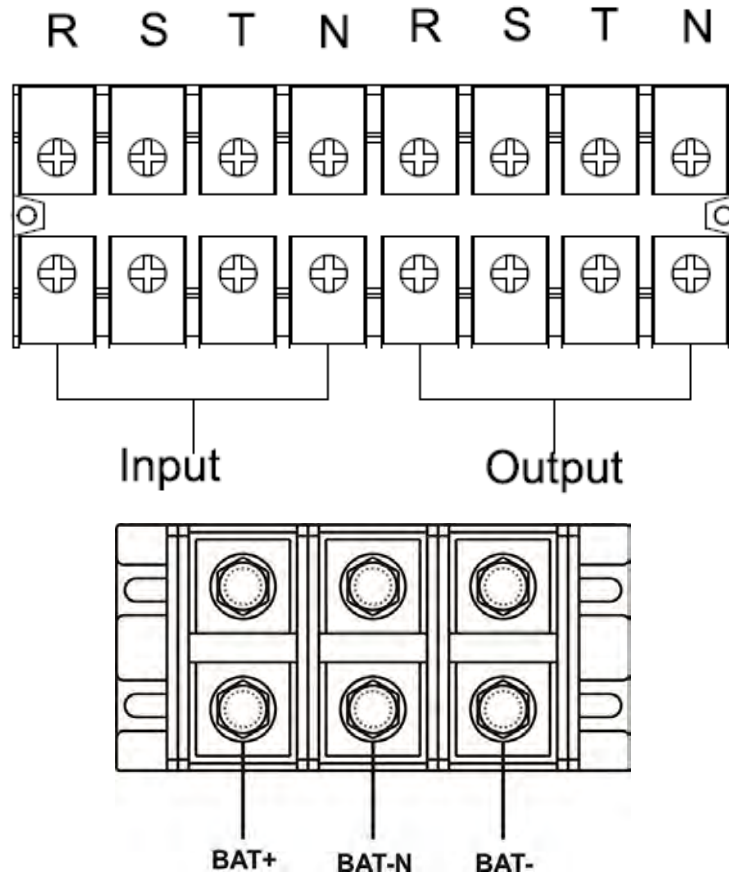

Terminal block wiring diagram for HV 60KL/80KL and LV 30KL/40KL

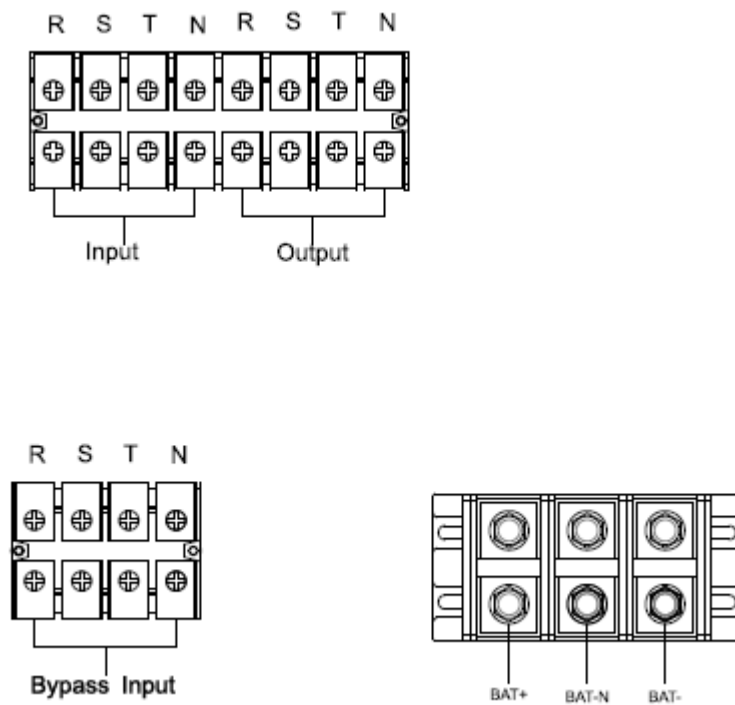

Terminal block wiring diagram for HV 60KL/80KL and LV 30KL/40KL DUAL

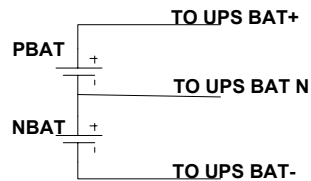

Battery connection wiring

NOTE 1: Make sure that the wires are connected tightly with the terminals.

NOTE 2: Please install the output breaker between the output terminal and the load, and the breaker should be qualified with leakage current protective function if necessary.

6) Put the terminal block cover back to the rear panel of the UPS.



Warning: (Only for standard model)

- **Make sure the UPS is not turned on before installation. The UPS** should not be turned on during wiring connection.
- **Do not try to modify the standard model to the long-run model.** Particularly, do not try to connect the standard internal battery to the external battery. The battery type and voltage may be different. If you connect them together, it maybe causes the hazard of electric shock or fire!



Warning: (Only for long-run model)

- **Make sure a DC breaker or other protection device between UPS and external battery pack** is installed. If not, please install it carefully. Switch off the battery breaker before installation.


NOTE: **Set the battery pack breaker in "OFF" position and** then install the battery pack.

- **Pay highly attention to the rated battery voltage** marked on the rear panel. If you want to change the numbers of the battery pack, please make sure you modify the setting simultaneously. The connection with wrong battery voltage may cause permanent damage of the UPS. Make sure the voltage of the battery pack is correct.
- **Pay highly attention to the polarity marking on external battery terminal block, and make sure the correct battery polarity** is connected. Wrong connection may cause permanent damage of the UPS.
- **Make sure the protective earth ground wiring is correct.** The wire current spec, color, position, connection and conductance reliability should be checked carefully.
- **Make sure the utility input & output wiring is correct.** The wire current spec, color, position, connection and conductance reliability should be checked carefully. Make sure the L/N site is correct, not reverse and short-circuited.


2-4. UPS Installation for Parallel System

If the UPS is only available for single operation, you may skip this section to the next.


- 1) Install and wires the UPSs according to the section 2-3.
- 2) Connect the output wires of each UPS to an output breaker.
- 3) Connect all output breakers to a major output breaker. Then this major output breaker will directly connect to the loads.
- 4) Either common battery packs or independent battery packs for each UPS are allowed.
- 5) Refer to the following wiring diagram:

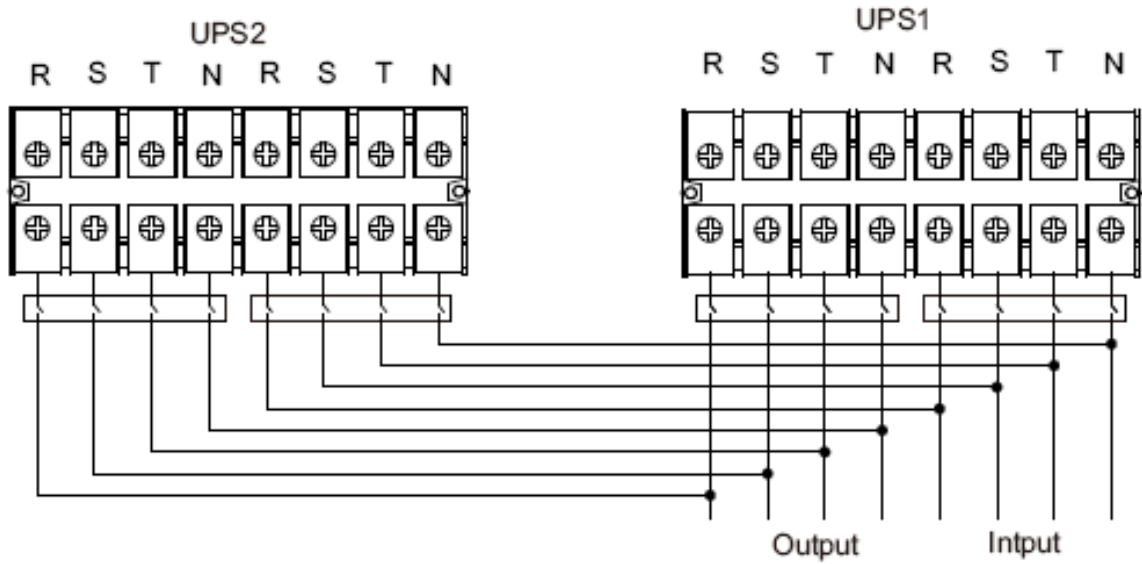


Wiring diagram of parallel system for HV 30K(L)/40K(L) and LV 15K(L)/20K(L)

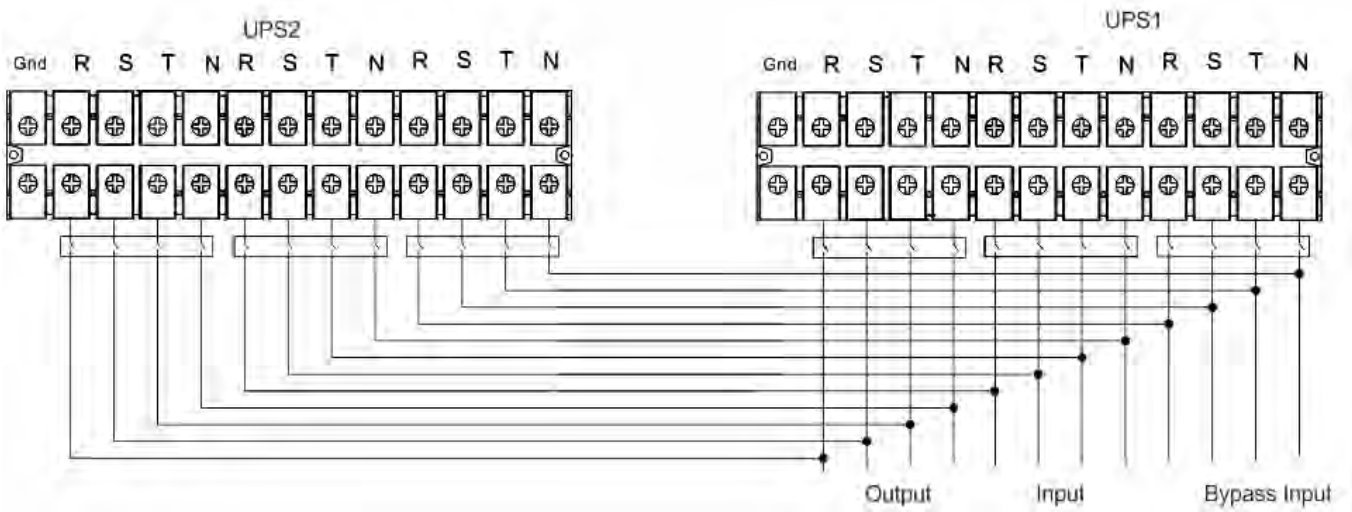

Wiring diagram of parallel system for HV 30K(L) DUAL/ 40K(L) DUAL

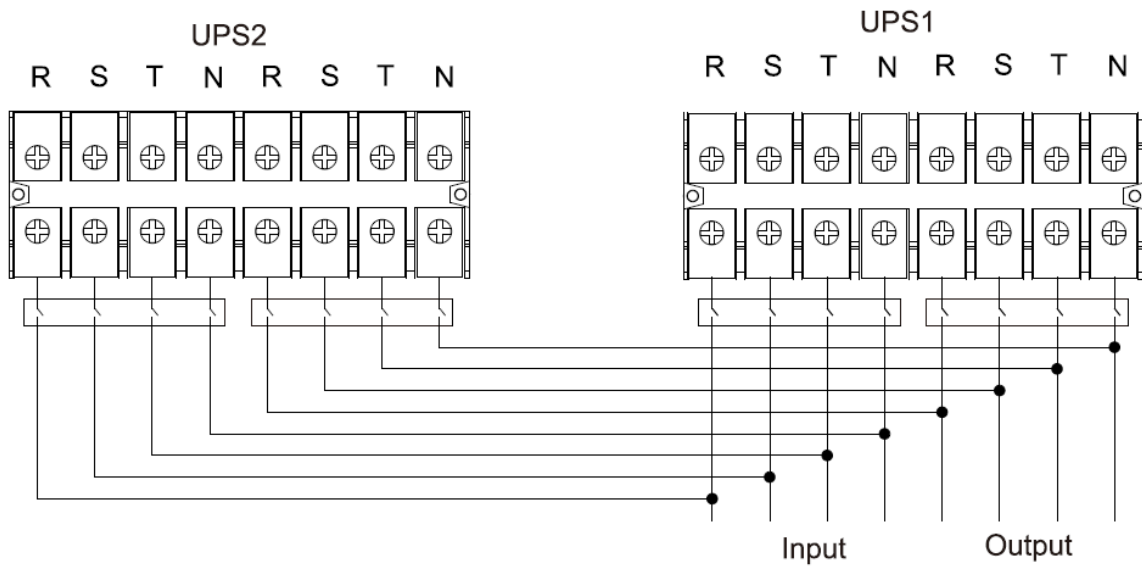

Wiring diagram of parallel system for HV 60KL/80KL and LV 30KL/40KL

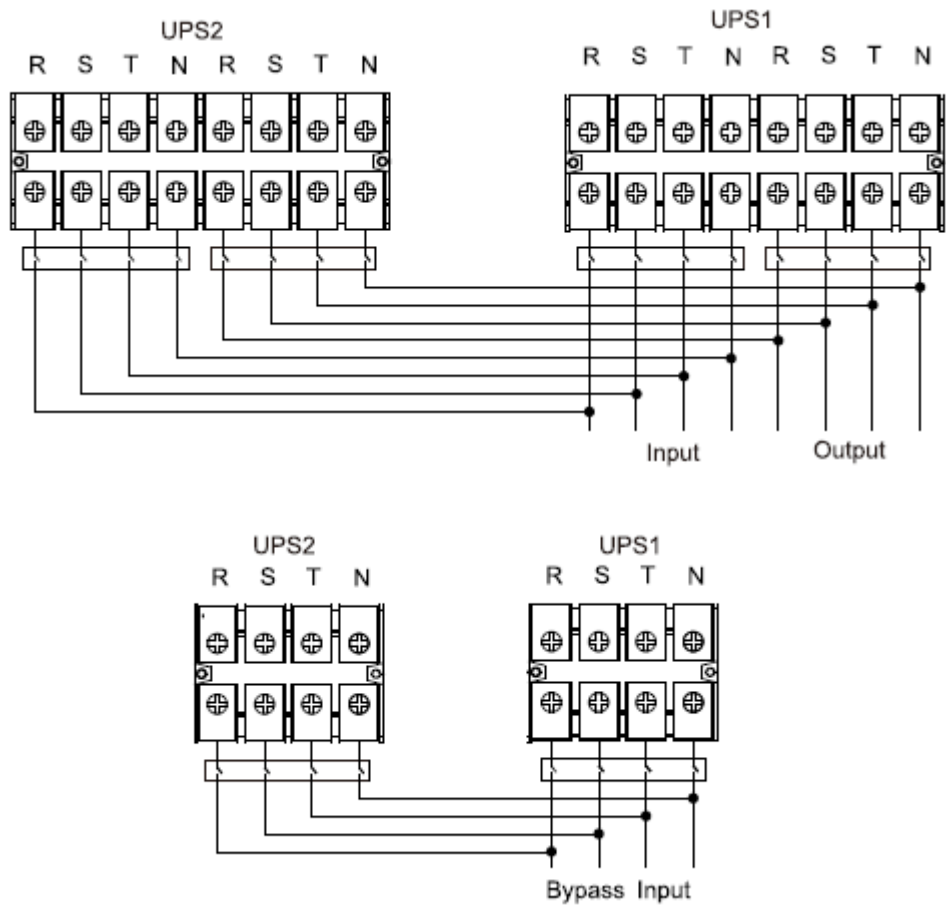

Wiring diagram of parallel system for HV 60KL/80KL and LV 30KL/40KL DUAL

2-5. Software Installation

For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown.


3. Operations

3-1. Button Operation

Button	Function
ON/Enter Button	<ul style="list-style-type: none"> ➤ Turn on the UPS: Press and hold the button more than 0.5s to turn on the UPS. ➤ Enter Key: Press this button to confirm the selection in setting menu.
OFF/ESC Button	<ul style="list-style-type: none"> ➤ Turn off the UPS: Press and hold the button more than 0.5s to turn off the UPS. ➤ Esc key: Press this button to return to last menu in setting menu.
Test/Up Button	<ul style="list-style-type: none"> ➤ Battery test: Press and hold the button more than 0.5s to test the battery while in AC mode and CVCF* mode. ➤ UP key: Press this button to display next selection in setting menu.
Mute/Down Button	<ul style="list-style-type: none"> ➤ Mute the alarm: Press and hold the button more than 0.5s to mute the buzzer. Please refer to section 3-4-9 for details. ➤ Down key: Press this button to display previous selection in setting menu.
Test/Up + Mute/Down Button	<ul style="list-style-type: none"> ➤ Press and hold the two buttons simultaneous more than 1s to enter/escape the setting menu.

* CVCF means Constant Voltage and Constant Frequency.

3-2. LED Indicators and LCD Panel

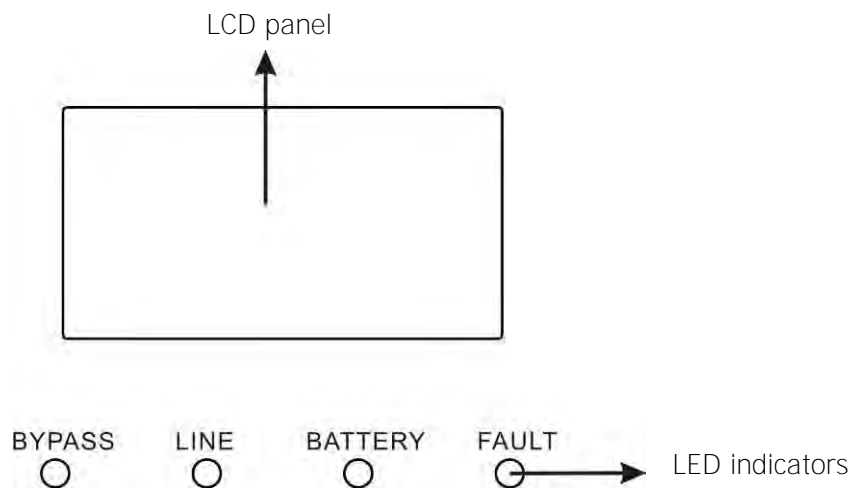


LED Indicators:

There are 4 LEDs on front panel to show the UPS working status:





Mode \ LED	Bypass	Line	Battery	Fault
UPS On	●	●	●	●
No Output mode	○	○	○	○
Bypass mode	●	○	○	○
AC mode	○	●	○	○
Battery mode	○	○	●	○
CVCF mode	○	●	○	○
Battery Test	●	●	●	○
ECO mode	●	●	○	○
Fault	○	○	○	●

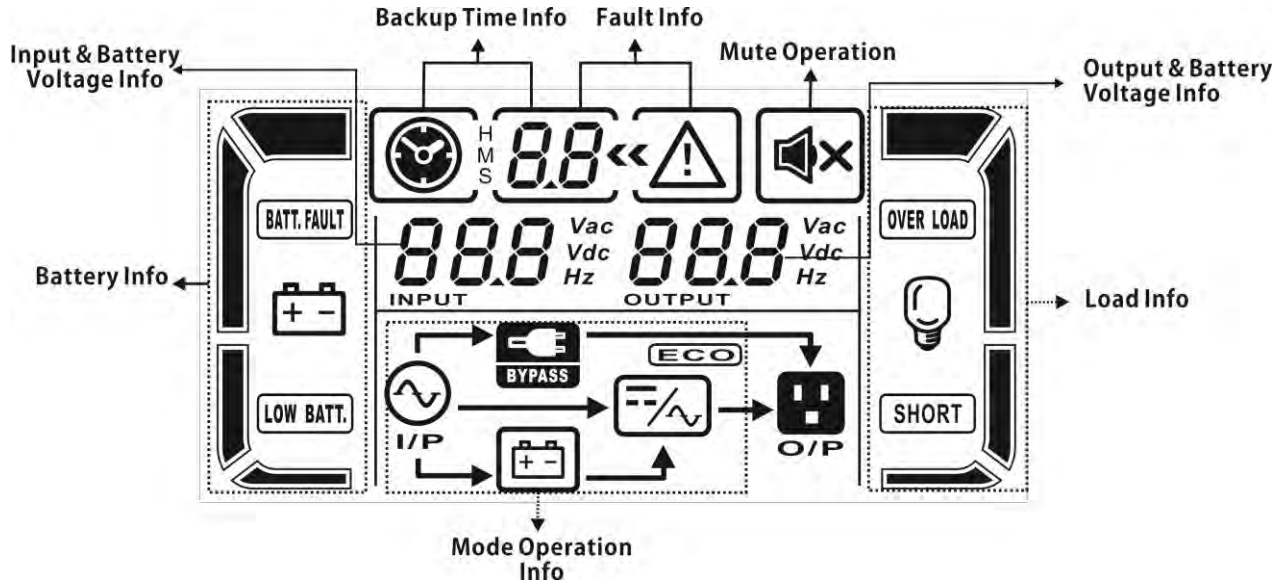Note: ● means LED is lighting, and ○ means LED is faded.

LCD Panel:



Display	Function
Backup time information	
	Indicates the battery discharge time in numbers H: hours, M: minutes, S: seconds
Fault information	
	Indicates that the warning and fault occurs.
	Indicates the fault codes, and the codes are listed in details in section 3-9.
Mute operation	
	Indicates that the UPS alarm is disabled.
Output & Battery voltage information	
	Indicates the output voltage, frequency or battery voltage. Vac: output voltage, Vdc: battery voltage, Hz: frequency
Load information	
	Indicates the load level by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates overload.
	Indicates the load or the output is short.
Mode operation information	
	Indicates the UPS connects to the mains.
	Indicates the battery is working.
	Indicates the bypass circuit is working.
	Indicates the ECO mode is enabled.
	Indicates the Inverter circuit is working.
	Indicates the output is working.

Battery information	
	Indicates the Battery capacity by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates the battery is not connected.
	Indicates low battery level and low battery voltage.
Input & Battery voltage information	
	Indicates the input voltage or frequency or battery voltage. Vac: Input voltage, Vdc: battery voltage, Hz: input frequency

3-3. Audible Alarm

Description	Buzzer status	Muted
UPS status		
Bypass mode	Beeping once every 2 minutes	Yes
Battery mode	Beeping once every 4 seconds	
Fault mode	Beeping continuously	
Warning		
Overload	Beeping twice every second	No
Others	Beeping once every second	
Fault		
All	Beeping continuously	Yes

3-4. Single UPS Operation

1. Turn on the UPS with utility power supply (in AC mode)

- 1) After power supply is connected correctly, set the breaker of the battery pack at "ON" position (the step only available for long-run model). Then set the line input breaker at "ON" position. At this time the fan is running and the UPS enter to power on mode for initialization, several seconds later, UPS operates in Bypass mode and supplies power to the loads via the bypass.

NOTE: When UPS is in Bypass mode, the output voltage will directly power from utility after you switch on the input breaker. In Bypass mode, the load is not protected by UPS. To protect your precious devices, you should turn on the UPS. Refer to next step.

- 2) Press and hold **the "ON" button** for 0.5s to turn on the UPS and the buzzer will beep once.
- 3) A few seconds later, the UPS will enter to AC mode. If the utility power is abnormal, the UPS will operate in Battery mode without interruption.

NOTE: When the UPS is running out battery, it will shut down automatically at Battery mode. When the utility power is restored, the UPS will auto restart in AC mode.

2. Turn on the UPS without utility power supply (in Battery mode)

- 1) Make sure that the two strings of batteries are connected correctly in order of "+, GND, -" terminals and the breaker of the battery pack is at "ON" position (only for long-run model).
- 2) Press **the "ON" button** to set up the power supply for the UPS, UPS will enter to power on mode. After initialization UPS will enter to No Output mode, then Press and hold **the "ON" button** for 0.5s to turn on the UPS, and the buzzer will beep once.
- 3) A few seconds later, the UPS will be turned on and enter to Battery mode.

3. Connect devices to UPS

After the UPS is turned on, you can connect devices to the UPS.

- 1) Turn on the UPS first and then switch on the devices one by one, the LCD panel will display total load level.
- 2) If it is necessary to connect the inductive loads such as a printer, the in-rush current of the load should be calculated carefully to see if it meets the overload capability of the UPS. We strongly recommend that 150% overload is less than 60ms.
- 3) If the UPS is overload, the buzzer will beep twice every second.
- 4) When the UPS is overload, please remove some loads immediately. It is recommended to have the total loads connected to the UPS less than 80% of its nominal power capacity to prevent overload for system safety.
- 5) If the overload time is over acceptable time listed in spec at AC mode, the UPS will automatically transfer to Bypass mode. After the overload is removed, it will return to AC mode. If the overload time is over acceptable time listed in spec at Battery mode, the UPS will become fault status. At this time, if bypass is enabled, the UPS will power to the load via bypass. If bypass function is disabled or the input power is not within bypass acceptable range, it will cut off output directly.

4. Charge the batteries

- 1) After the UPS is connected to the utility power and turned on in AC mode, the charger will charge the batteries automatically except in battery mode, during battery self-test, overload or when battery voltage is high.
- 2) Suggest to charge batteries at least 10 hours before use. Otherwise, the backup time may be shorter than expected time.
- 3) Make sure the battery numbers setting on the control board (Please refer to the section 3-4-13 for detailed setting) is consistent to real connection.

5. Battery mode operation

- 1) When the UPS is in Battery mode, the buzzer will beep according to different battery capacity. If the battery capacity is more than 25%, the buzzer will beep once every 4 seconds; If the battery voltage drops to the alarm level, the buzzer will beep quickly (once every sec) to remind users that the battery is at low level and the UPS will shut down automatically soon. Users could switch off some non-critical loads to disable the shutdown alarm and prolong the backup time. If there is no more load to be switched off at that time, you have to shut down all loads as soon as possible to protect the devices or save data. Otherwise, there is a risk of data loss or load failure.
- 2) In Battery mode, if buzzer sound annoys, users can press the Mute button to disable the buzzer.
- 3) The backup time of the long-run model depends on the external battery capacity.
- 4) The backup time may vary from different environment temperature and load type.
- 5) When setting backup time for 16.5 hours (default value from LCD panel), after discharging 16.5 hours, UPS will shut down automatically to protect the battery. This battery discharge protection can be enabled or disabled through LCD panel control. (Refer to 3-7 LCD setting section)

6. Test the batteries

- 1) If you need to check the battery status when the UPS is running in AC mode/CVCF mode, you could press the "Test" button to let the UPS do battery self-test.
- 2) Users also can set battery self-test through monitoring software.

7. Turn off the UPS with utility power supply in AC mode

- 1) Turn off the inverter of the UPS by pressing **"OFF" button for at least 0.5s**, and then the buzzer will beep once. The UPS will turn into Bypass mode.

NOTE 1: If the UPS has been set to enable the bypass output, it will bypass voltage from utility power to output terminal even though you have turned off the UPS (inverter).

NOTE 2: After turning off the UPS, please be aware that the UPS is working at Bypass mode and

there is risk of power loss for connected devices.

- 2) In Bypass mode, output voltage of the UPS is still present. In order to cut off the output, switch off the line input breaker. A few seconds later, there is no display shown on the display panel and UPS is complete off.

8. Turn off the UPS without utility power supply in Battery mode

- 1) Turn off the UPS by pressing "**OFF**" button for at least 0.5s, and then the buzzer will beep once.
- 2) Then UPS will cut off power to output and there is no display shown on the display panel.

9. Mute the buzzer

- 1) **To mute the buzzer, please press the "Mute" button for at least 0.5s.** If you press it again after the buzzer is muted, the buzzer will beep again.
- 2) Some warning alarms **can't be muted unless the** error is fixed. Please refer to section 3-3 for the details.

10. Operation in warning status

- 1) When Fault LED flashes and the buzzer beeps once every second, it means that there are some problems for UPS operation. Users can get the warning indicator from LCD panel. Please check the trouble shooting table in chapter 4 for details.
- 2) Some warning alarms **can't be muted unless the** error is fixed. Please refer to section 3-3 for the details.

11. Operation in Fault mode

- 1) When Fault LED illuminates and the buzzer beeps continuously, it means that there is a fatal error in the UPS. Users can get the fault code from display panel. Please check the trouble shooting table in chapter 4 for details.
- 2) Please check the loads, wiring, ventilation, utility, battery and so on **after the fault occurs. Don't try to turn on the UPS again before solving the problems. If the problems can't be fixed, please contact the distributor or service people immediately.**
- 3) For emergency case, please cut off the connection from utility, external battery, and output immediately to avoid more risk or danger.

12. Operation in maintenance mode (only for the model with maintenance bypass switch)

This operation is only available for professional or qualified technicians.

When the UPS needs to repair or maintenance and **the load couldn't be cut off in this case, please** operate the UPS in maintenance mode.

- 1) First, switch off the UPS.
- 2) Then, remove the cover of maintenance bypass switch on the panel.
- 3) **Turn the maintenance switch to "BYPASS" position.**

13. Operation of changing battery numbers

- 1) This operation is only available for professional or qualified technicians.
- 2) **Turn off the UPS. If the load couldn't be cut off, you should remove the cover of maintenance bypass switch on the rear panel and turn the maintenance switch to "BPS" position first.**
- 3) Switch off the line input breaker and external bypass input breaker (only for dual-input model). Then, **UPS will enter to "No Output mode".**
- 4) Connect communication cable to UPS and computer. Be sure to install bundled software first. After software is installed, please enter the software to set up battery numbers carefully.
- 5) After settings are updated successfully, shut down the UPS with battery connected to save the change. Then, modify the connected battery pack numbers carefully.

- 6) Switch on the line input breaker and external bypass input breaker (only for dual-input model). Then, the UPS will enter bypass mode. If the UPS is in maintenance bypass mode, turn the maintenance **switch to "UPS" position** and then turn on the UPS.

NOTE: When warning code "01" occurs, it's not able to set up the battery numbers. Only in No output mode, battery numbers can be set up.

14. Operation of setting charging current

- 1) This operation is only available for professional or qualified technicians.
- 2) Connect communication cable to UPS and computer. Enter bundled software to set up charging current carefully.
- 3) After settings are updated successfully, the updated charging current will be effective immediately. In order to apply the same setting of charging current next time, you should turn off UPS with battery connected to save the change.

15. Operation of setting charger numbers

- 1) This operation is only available for professional or qualified technicians.
- 2) Turn **off the UPS. If the load couldn't be cut off, you should remove the cover of maintenance bypass switch on the rear panel and turn the maintenance switch to "BPS" position first.**
- 3) **Switch off the line input breaker and UPS will enter to "No Output mode".**
- 4) Connect communication cable to UPS and computer. Enter bundled software to set up charger numbers carefully.
- 5) After settings are updated successfully, shut down the UPS with battery connected to save the change. Then, modify the connected charger numbers carefully.
- 6) Switch on the line input breaker and external bypass input breaker (only for dual-input model). Then, the UPS will enter bypass mode. If the UPS is in maintenance bypass mode, turn the maintenance **switch to "UPS" position and then turn on** the UPS.

NOTE: The setting charger number must be the same as real installed number in the UPS. If the setting number is more than real installed number, the charging current can not meet the specification.

3-5. Parallel Operation

1. Parallel system initial startup

First of all, please make sure all of the UPSs are parallel models and have the same configuration.

- 1) Turn on each UPS to AC mode respectively (Refer to section 3-4(1)). Then, measure the inverter output voltage of each phase for each UPS with a multimeter. Please calibrate the inverter output voltage by configuring inverter voltage adjustment (Refer to Program 15, 16 and 17, section 3-7) in LCD setting until the output voltage difference of each UPS is within 1V. If voltage difference is less **than 1V, it's ok to start parallel operation.**
- 2) Turn off each UPS (Refer to section 3-4(7.)). Then, follow the wiring procedure in section 2-4.
- 3) Remove the cover of parallel share current cable port on the UPS, connect each UPS one by one with the parallel cable and share current cable, and then screw the cover back.
- 4) Turn on the parallel system in AC mode:
 - a) Turn on the line input breaker of each UPS. If using dual-input unit, please also turn on the external bypass input breaker. After all UPSs enter to bypass mode, measure the output voltage between two UPSs for the same phase to make sure the phase sequence is correct. If these two voltage differences are near to zero, that means all connections are correct.

Otherwise, please check if the wirings are connected correctly.

- b) Turn on the output breaker of each UPS.
 - c) Turn on each UPS in turns. After a while, the UPSs will enter to AC mode synchronously and then, the parallel system is completed.
- 5) Turn on the parallel system in Battery mode:
- a) Turn on the battery breaker (only available in long-run model) and external output breaker of each UPS.
 - b) Turn on any UPS. A few seconds later, the UPS will enter to battery mode.
 - c) Then, turn on another UPS. A few seconds later, the UPS will enter to battery mode and add to the parallel system.
 - d) If you have the third UPS, follow the same procedure of c). Then, the parallel system is complete.

If more detailed information is needed, please contact supplier or service center for parallel operation instruction.

2. Add one new unit into the parallel system

- 1) You can not add one new unit into the parallel system when whole system is running. You must cut off the load and shutdown the system.
- 2) Make sure all of the UPS are the parallel models, and follow the wiring refer to section 2-4.
- 3) Install the new parallel system refers to the previous section.

3. Remove one unit from the parallel system

There are two methods to remove one unit from the parallel system:

First method:

- 1) **Press the "OFF" key twice and each time should be lasted for more than 0.5s.** Then, the UPS will enter into bypass mode or no output mode without output.
- 2) Turn off the external output breaker of this unit, and then turn off the input breaker of this unit.
- 3) After it shuts down, you can turn off the battery breaker (for long-run model) and remove the parallel and share current cables. And then remove the unit from the parallel system.

Second method:

- 1) If the bypass is abnormal, you can not remove the UPS without interruption. You must cut off the load and shut down the system first.
- 2) Make sure the bypass setting is enabled in each UPS and then turn off the running system. All UPSs will transfer to Bypass mode. Remove all the maintenance bypass covers and set the maintenance **switches from "UPS" to "BPS"**. **Turn off** all the input breakers and battery breakers in parallel system.
- 3) Turn off the output breaker and remove the parallel cable and share current cable of the UPS which you want to remove. Then, remove it from parallel system.
- 4) Turn on the input breaker of the remaining UPS and the system will transfer to Bypass mode. Set **the maintenance switches from "BPS" to "UPS and put the maintenance bypass covers back.**
- 5) Turn on the remaining UPS according to the previous section.



Warning: (Only for the parallel system)


- Before turning on the parallel system to activate inverter, make sure that all **unit's** maintenance switch at the same position.
- When parallel system is turned on to work through inverter, please do not operate the maintenance switch of any unit.
- If applying **for parallel system, it's** not supported for ECO mode. Therefore, please DO NOT **"enable"** ECO mode in any unit.

3-6. Abbreviation Meaning in LCD Display

Abbreviation	Display content	Meaning
ENA	ENR	Enable
DIS	diS	Disable
ATO	AtO	Auto
BAT	bAt	Battery
NCF	nCF	Normal mode (not CVCF mode)
CF	CF	CVCF mode
SUB	SuB	Subtract
ADD	AdD	Add
ON	ON	On
OFF	OFF	Off
FBD	Fbd	Not allowed
OPN	OPN	Allow
RES	RES	Reserved
N.L	NL	Neutral line loss
CHE	CHE	Check
OP.V	OPV	Output voltage
PAR	PAR	Parallel, 001 means the first UPS
AN	AN	The first phase
BN	bN	The second phase
CN	CN	The third phase
AB	Ab	The first line
BC	bC	The second line
CA	CA	The third line
HS.H	HSH	Hot Standby

3-7. LCD Setting

There are three parameters to set up the UPS. Refer to following diagram.

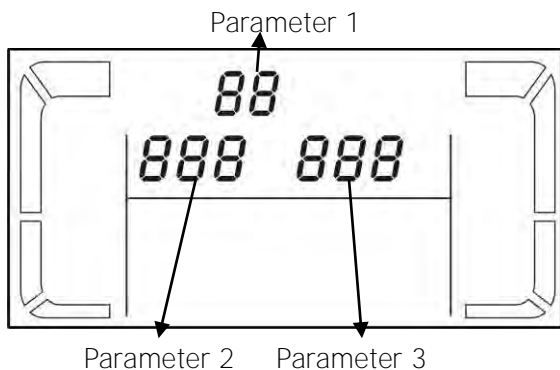

Parameter 1: It's for program alternatives. Refer to below tables for the programs to set up.

Parameter 2 and parameter 3 are the setting options or values for each program.

Note: Please select "Up" or "Down" button to change the programs or parameters.


Programs available list for parameter 1:

Code	Description	Bypass / No Output mode	AC mode	ECO mode	CVCF mode	Battery mode	Battery Test
01	Output voltage	Y*					
02	Output frequency	Y					
03	Voltage range for bypass	Y					
04	Frequency range for bypass	Y					
05	ECO mode enable/disable	Y					
06	Voltage range for ECO mode	Y					
07	Frequency range for ECO mode	Y					
08	Bypass mode setting	Y	Y				
09	Maximum battery discharge time setting	Y	Y	Y	Y	Y	Y
10	Reserved	Reserved for future options					
11	Hot standby function Setting	Y					
12	Neutral loss detection	Y	Y	Y	Y	Y	Y
13	Battery voltage calibration	Y	Y	Y	Y	Y	Y
14	Charger voltage adjustment	Y	Y	Y	Y	Y	Y
15	Inverter A voltage adjustment		Y		Y	Y	
16	Inverter B voltage adjustment		Y		Y	Y	
17	Inverter C voltage adjustment		Y		Y	Y	
18	Output A voltage calibration		Y		Y	Y	
19	Output B voltage calibration		Y		Y	Y	
20	Output C voltage calibration		Y		Y	Y	


*Y means that this program can be set in this mode.

Note: All parameter settings will be saved only when UPS shuts down normally with internal or external battery connection. (Normal UPS shutdown means turning off input breaker in bypass/no output mode).


● 01: Output voltage

Interface	Setting
	<p>Parameter 3: Output voltage</p> <p>For 208/220/230/240 VAC models, you may choose the following output voltage:</p> <p>208: presents output voltage is 208Vac 220: presents output voltage is 220Vac 230: presents output voltage is 230Vac 240: presents output voltage is 240Vac</p> <p>For 120/127 VAC models, you may choose the following output voltage:</p> <p>120: presents output voltage is 120Vac 127: presents output voltage is 127Vac</p>


● 02: Output frequency

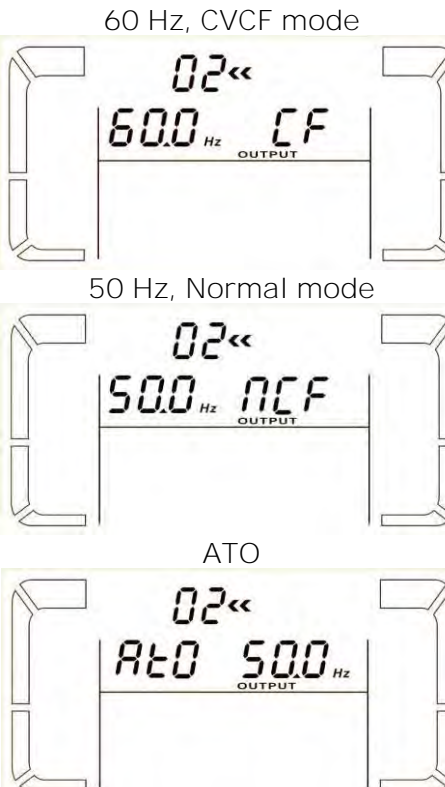Interface	Setting
 <p>60 Hz, CVCF mode</p> <p>50 Hz, Normal mode</p> <p>ATO</p>	<p>Parameter 2: Output Frequency Setting the output frequency. You may choose following three options in parameter 2: 50.0Hz: The output frequency is setting for 50.0Hz. 60.0Hz: The output frequency is setting for 60.0Hz. ATO: If selected, output frequency will be decided according to the latest normal utility frequency. If it is from 46Hz to 54Hz, the output frequency will be 50.0Hz. If it is from 56Hz to 64Hz, the output frequency will be 60.0Hz. ATO is default setting.</p> <p>Parameter 3: Frequency mode Setting output frequency at CVCF mode or not CVCF mode. You may choose following two options in parameter 3: CF: Setting UPS to CVCF mode. If selected, the output frequency will be fixed at 50Hz or 60Hz according to setting in parameter 2. The input frequency could be from 46Hz to 64Hz. NCF: Setting UPS to normal mode (not CVCF mode). If selected, the output frequency will synchronize with the input frequency within 46~54 Hz at 50Hz or within 56~64 Hz at 60Hz according to setting in parameter 2. If 50 Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 46~54 Hz. If 60Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 56~64 Hz. *If Parameter 2 is ATO, the Parameter 3 will show the current frequency.</p>


● 03: Voltage range for bypass

Interface	Setting
	<p>Parameter 2: Set the acceptable low voltage for bypass. For 208/220/230/240 VAC models, setting range is from 176V to 209V and the default value is 176V. For 120/127 VAC models, setting range is from 96V to 88V and the default value is 96V.</p> <p>Parameter 3: Set the acceptable high voltage for bypass. For 208/220/230/240 VAC models, setting range is from 231V to 276V and the default value is 264V. For 120/127 VAC models, setting range is from 146V to 156V and the default value is 146V.</p>

● 04: Frequency range for bypass


Interface	Setting
	<p>Parameter 2: Set the acceptable low frequency for bypass. 50 Hz system: Setting range is from 46.0Hz to 49.0Hz. 60 Hz system: Setting range is from 56.0Hz to 59.0Hz. The default value is 46.0Hz/56.0Hz.</p> <p>Parameter 3: Set the acceptable high frequency for bypass. 50 Hz: Setting range is from 51.0Hz to 54.0 Hz. 60 Hz: Setting range is from 61.0Hz to 64.0Hz. The default value is 54.0Hz/64.0Hz.</p>

● 05: ECO mode enable/disable

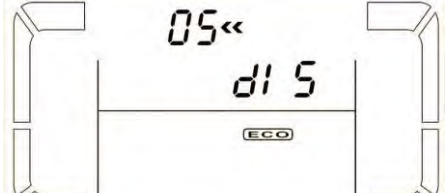
Interface	Setting
	<p>Parameter 3: Enable or disable ECO function. You may choose following two options: DIS: disable ECO function ENA: enable ECO function If ECO function is disabled, voltage range and frequency range for ECO mode still can be set, but it is meaningless unless the ECO function is enabled.</p>

***If the system is running in parallel, be sure to set "DIS" only.**


● 06: Voltage range for ECO mode

Interface	Setting
	<p>Parameter 2: Low voltage point in ECO mode. The setting range is from -5% to -10% of the nominal voltage.</p> <p>Parameter 3: High voltage point in ECO mode. The setting range is from +5% to +10% of the nominal voltage.</p>


● 07: Frequency range for ECO mode

Interface	Setting
	<p>Parameter 2: Set low voltage point for ECO mode. 50 Hz system: Setting range is from 46.0Hz to 48.0Hz. 60 Hz system: Setting range is from 56.0Hz to 58.0Hz. The default value is 48.0Hz/58.0Hz.</p> <p>Parameter 3: Set high voltage point for ECO mode. 50 Hz: Setting range is from 52.0Hz to 54.0 Hz. 60 Hz: Setting range is from 62.0Hz to 64.0Hz. The default value is 52.0Hz/62.0Hz.</p>


● 08: Bypass mode setting

Interface	Setting
	<p>Parameter 2: OPN: Bypass allowed. When selected, UPS will run at Bypass mode depending on bypass enabled/disabled setting. FBD: Bypass not allowed. When selected, it's not allowed for running in Bypass mode under any situations.</p> <p>Parameter 3: ENA: Bypass enabled. When selected, Bypass mode is activated. DIS: Bypass disabled. When selected, automatic bypass is acceptable, but manual bypass is not allowed. Manual bypass means users manually operate UPS for Bypass mode. For example, pressing OFF button in AC mode to turn into Bypass mode.</p>

● 09: Maximum battery discharge time setting

Interface	Setting
	<p>Parameter 3: 000~999: Set the maximum discharge time from 0 min to 999 min. UPS will shut down to protect battery if the discharge time arrives before the battery is under voltage. The default value is 990 min.</p> <p>DIS: Disable battery discharge protection and backup time will depend on battery capacity.</p>

● 10: Reserved

Interface	Setting
	<p>Reserve for future options.</p>

● 11: Hot standby function Setting

Interface	Setting
	<p>Parameter 2: HS.H: Indicates Hot standby function.</p> <p>Parameter 3: Enable or disable hot standby function. YES: Hot standby function is enabled. It means that the current UPS is set to host of the hot standby function, and it will restart After AC recovery even without battery connected. NO: Hot standby function is disabled. The UPS is running at Normal mode and can't restart without battery.</p>

● 12: Neutral loss detection

Interface	Setting
	<p>Parameter 2: N.L: Indicates neutral loss detection function.</p> <p>Parameter 3: DIS: Disable the neutral loss detection function. The UPS will not detect the neutral loss or not. ATO: The UPS will automatically detect the neutral is lost or not. If neutral loss is detected, an alarm will be generated. If the UPS is turned on, it will transfer to battery mode. When neutral is restored and detected, the alarm will be muted automatically and the UPS will go back to normal mode automatically. CHE: The UPS will automatically detect the neutral loss. If neutral loss is detected, an alarm will be generated. If the UPS is turned on, it will transfer to battery mode. When neutral is restored, the alarm will NOT be muted automatically and the UPS will NOT go back to normal mode automatically. Here, you must mute the alarm and make the UPS go back to normal mode manually. The operation is: Firstly, enter this menu and press the "Enter" key to make the "CHE" flash. Secondly, press the "Enter" key again to activate the neutral detection (check). If neutral is detected, the alarm will be muted and the UPS will go back to normal mode. If neutral is not detected, the UPS will continue alarming and stay on the latest status until the neutral is detected well at next manual checking operation. CHE is default setting.</p>

● 13: Battery voltage calibration


Interface	Setting
	<p>Parameter 2: Select "Add" or "Sub" function to adjust battery voltage to real figure.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p>

● 14: Charger voltage adjustment


Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust charger voltage</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p> <p>NOTE: *Before making voltage adjustment, be sure to disconnect all batteries first to get the accurate charger voltage.</p>

* Any modification should be suitable to battery specifications.


● 15: Inverter A voltage adjustment

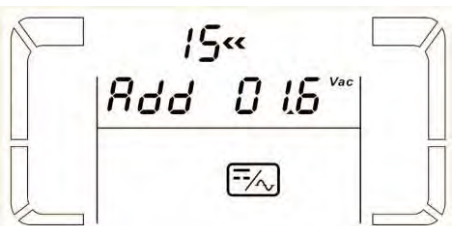Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter A voltage.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p> <p>* Add or Sub is according to the output voltage what you set.</p>


● 16: Inverter B voltage adjustment

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter B voltage*.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p> <p>*It will display number 1 under Add or Sub to represent inverter B voltage.</p>


● 17: Inverter C voltage adjustment

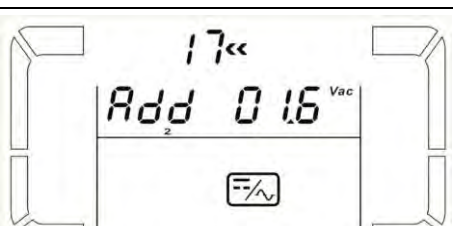Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter C voltage*.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V, the default value is 0V.</p> <p>*It will display number 2 under Add or Sub to represent inverter C voltage.</p>


● 18: Output A voltage calibration

Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage.</p> <p>Parameter 3: it shows the internal measurement value of the output A voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p>

● 19: Output B voltage calibration

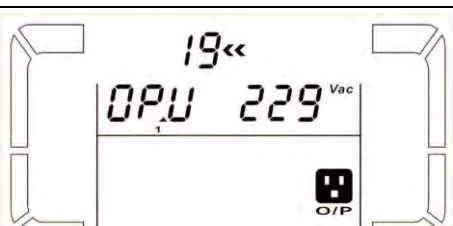Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage*.</p> <p>Parameter 3: it shows the internal measurement value of the output B voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p> <p>*It will display number 1 under OPU to represent the output B voltage.</p>

● 20: Output C voltage calibration

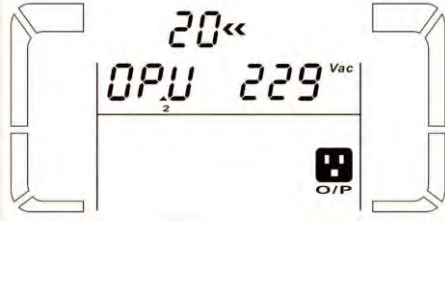
Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage. Parameter 3: it shows the internal measurement value of the output C voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p> <p>*It will display number 2 under OPU to represent the output C voltage.</p>

3-8. Operating Mode/Status Description



Following table shows LCD display for operating modes and status.













(1) If the UPS is in normal operation, it will show seven screens one by one, which represents 3 phase input voltages (An, bn, Cn), 3 line input voltages (Ab, bC, CA) and frequency in turns.

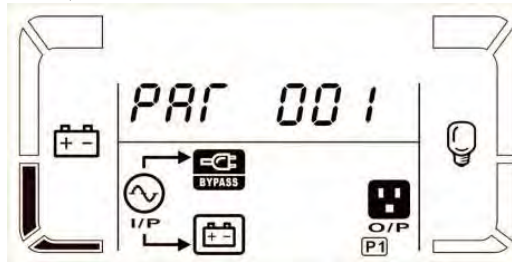






(2) If parallel UPS systems are successfully set up, it will show one more screen with "PAR" in parameter 2 and assigned number in parameter 3 as below parallel screen diagram. The master UPS will be default assigned as "001" and slave UPSs will be assigned as either "002" or "003". The assigned numbers may be changed dynamically in the operation;

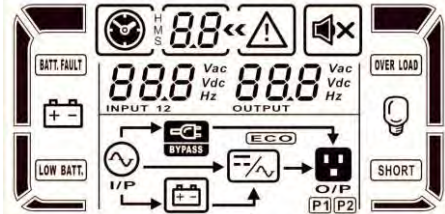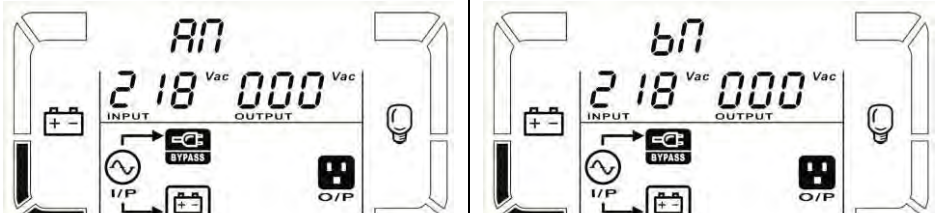

Parallel screen

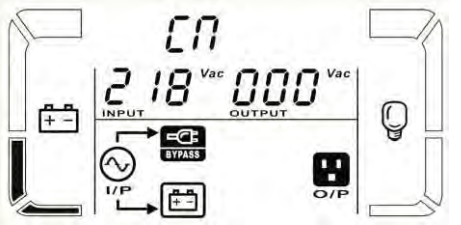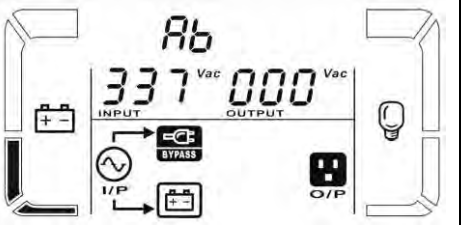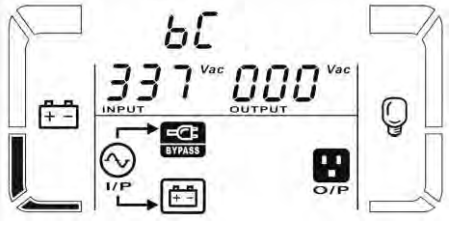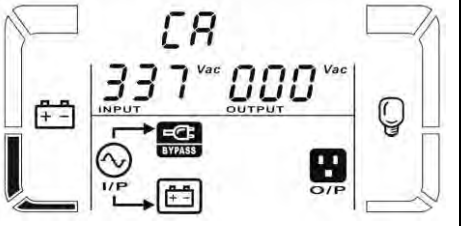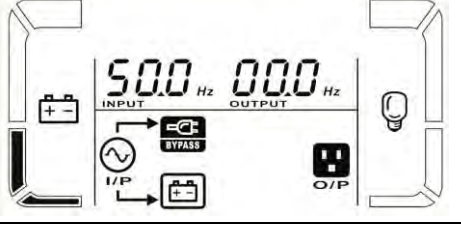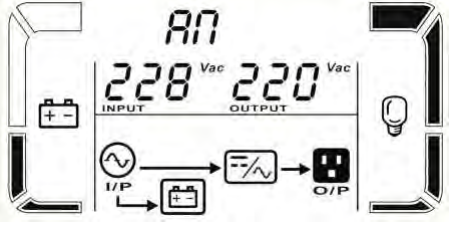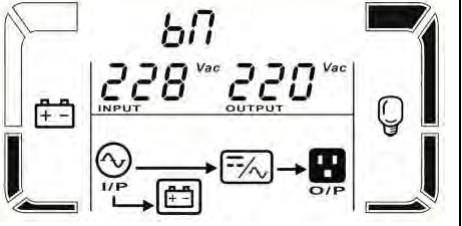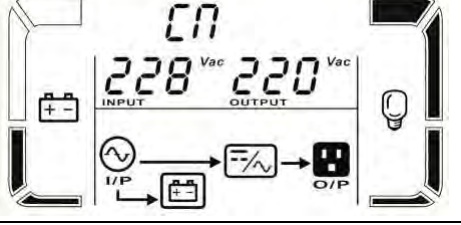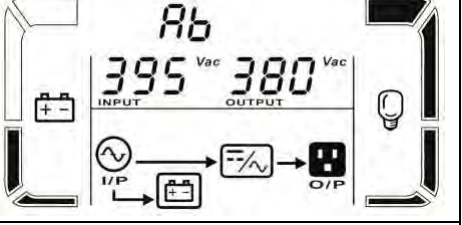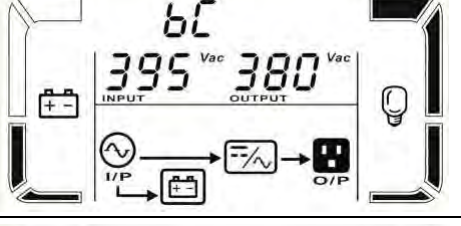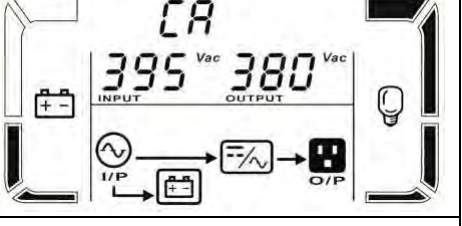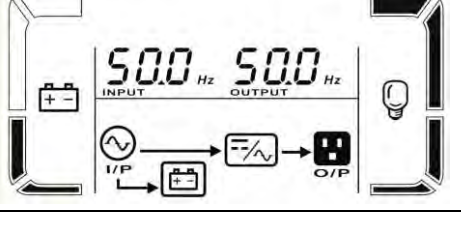Operating mode/status		
UPS Power On	Description	When UPS is powered on, it will enter into this mode for a few seconds as initializing the CPU and system.
	LCD display	
No-output mode	description	When bypass voltage/frequency is out of acceptable range or bypass is disabled (or forbidden), UPS will enter into no-output mode if powering on or turning off the UPS. It means the UPS has no output. Alarm beeps every two minutes.
	LCD display	

		 
		 
		
AC mode	Description	When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at AC mode.
	LCD display	 
		 
		 
		
ECO mode	Description	When the input voltage is within voltage regulation range and ECO mode is enabled, UPS will bypass voltage to output for energy saving.


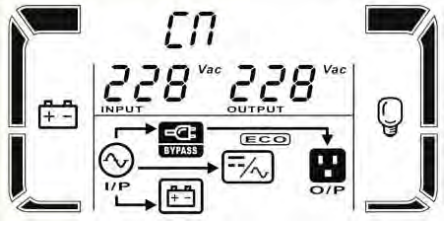
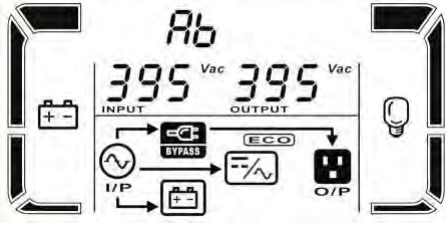
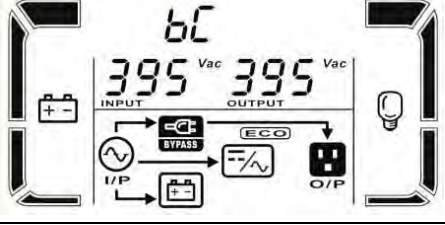
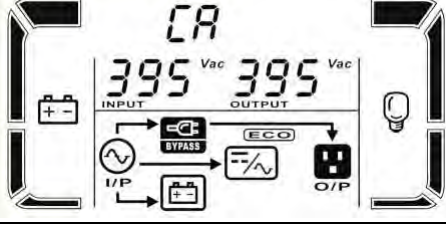
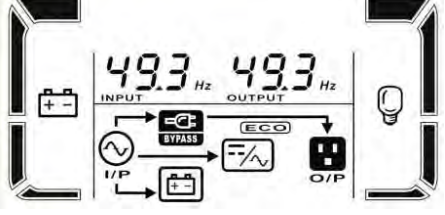
LCD display		
		
		
		









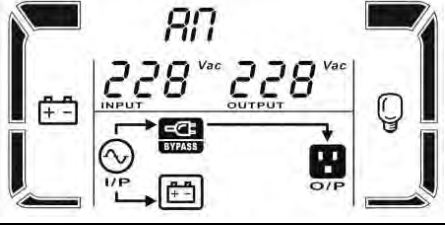



CVCF mode






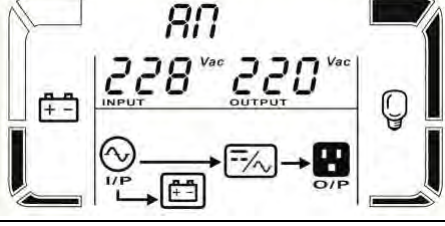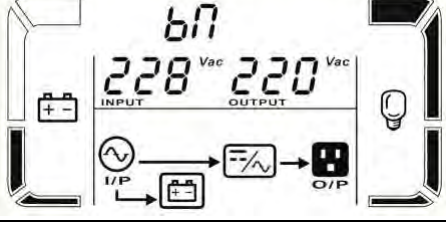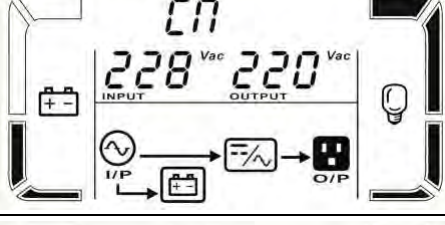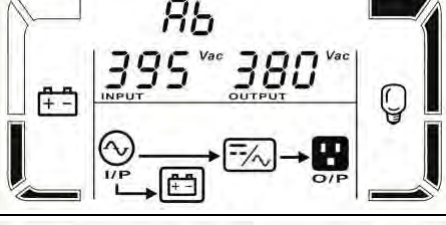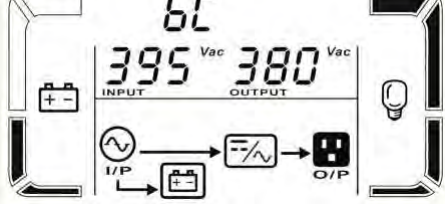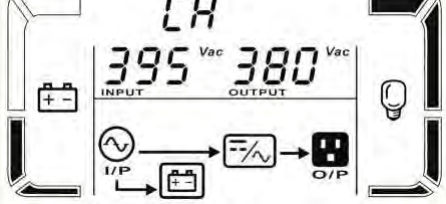

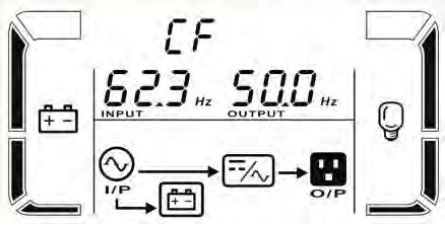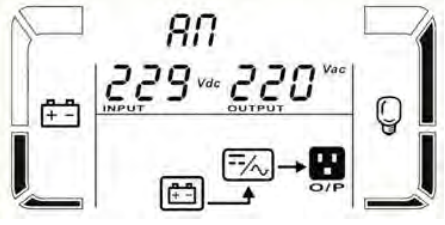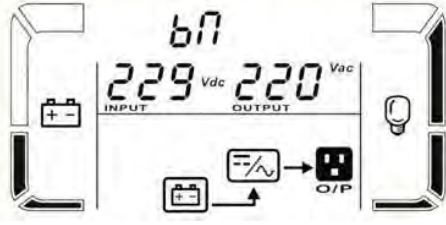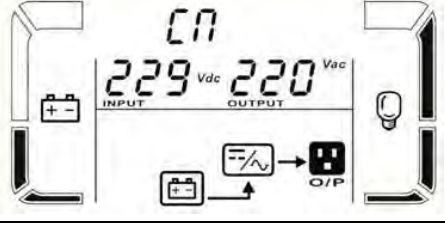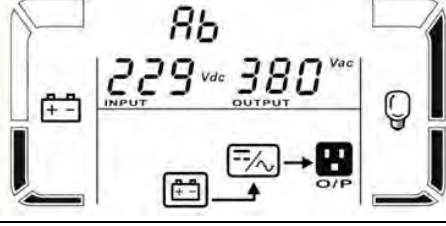
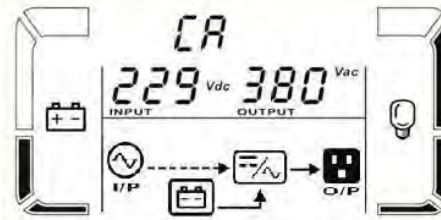

Description





When the output frequency is set to "CF", the inverter will output constant frequency (50 Hz or 60 Hz). At this mode, the UPS will have no bypass output but still charge battery.

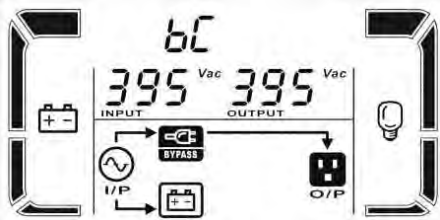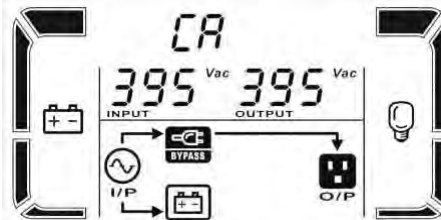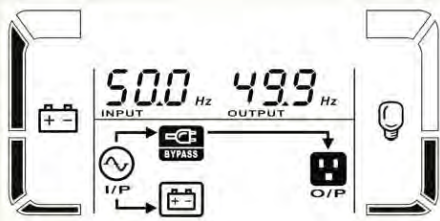LCD display

			
Battery mode	Description	When the input voltage/frequency is beyond the acceptable range or power failure, UPS will backup power from battery and alarm will beep every 4 seconds.	
	LCD display		
			
			
			
Bypass mode	Description	When input voltage is within acceptable range and bypass is enabled, turn off the UPS and it will enter Bypass mode. Alarm beeps every two minutes.	
	LCD display		
			

			
			
Battery Test	Description	<p>When UPS is in AC mode or CVCF mode, press "Test" key for more than 0.5s. Then, the UPS will beep once and start "Battery Test". The line between I/P and inverter icons will blink to remind users. This operation is used to check the battery status.</p>	
	LCD display		
			
			
			
Warning status	Description	<p>If some errors occur in the UPS (but it is still running normally), it will show one more screen to represent the warning situation. In the warning screen, the icon ⚠ will be flashing, and it can show up to 3 error codes and each code indicates one error. You can find the code meaning in the warning code table.</p>	



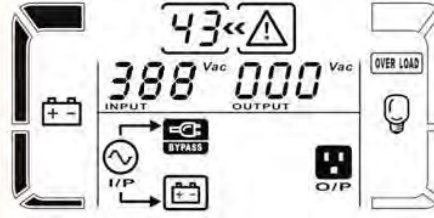














	LCD display		
Fault status	Description	When UPS has fault happened, the inverter will be blocked. It will display fault code in screen, and the icon ⚠ will light up. You can find the code meaning in the fault code table.	
	LCD display		
			

3-9. Fault Code

Fault code	Fault event	Icon	Fault code	Fault event	Icon
01	Bus start failure	None	42	DSP communication failure	None
02	Bus over	None	43	Overload	OVER LOAD
03	Bus under	None	46	Incorrect UPS setting	None
04	Bus unbalance	None	47	MCU communication failure	None
06	Converter over current	None	48	Two DSP firmware versions are incompatible in parallel system.	None
11	Inverter soft start failure	None	60	Bypass phase short circuited	SHORT
12	High inverter voltage	None	61	Bypass SCR short circuited	None
15	Inverter B output(line to neutral) short circuited	SHORT	62	Bypass SCR open circuited	None
16	Inverter C output(line to neutral) short circuited	SHORT	63	Voltage waveform abnormal in R phase	None
17	Inverter A-B output (line to line) short circuited	SHORT	64	Voltage waveform abnormal in S phase	None
18	Inverter B-C output (line to line) short circuited	SHORT	65	Voltage waveform abnormal in T phase	None
19	Inverter C-A output (line to line) short circuited	SHORT	66	Inverter current sample abnormal	None
1A	Inverter A negative power fault	None	67	Bypass O/P short circuited	SHORT
1B	Inverter B negative power fault	None	68	Bypass O/P line to line short circuited	SHORT
1C	Inverter C negative power fault	None	69	Inverter SCR short circuited	None
21	Battery SCR short circuited	None	6C	BUS voltage drops too fast	None
23	Inverter relay open circuited	None	6D	Current sampling error value	None
24	Inverter relay short	None	6E	SPS power error	None

	circuited				
25	Line wiring fault	None	6F	Battery polarity reverse	None
31	Parallel communication failure	None	71	PFC IGBT over-current in R phase	None
32	The host signal failure	None	72	PFC IGBT over-current in S phase	None
33	Synchronous signal failure	None	73	PFC IGBT over-current in T phase	None
34	Synchronous trigger signal failure	None	74	INV IGBT over-current in R phase	None
35	Parallel communication loss	None	75	INV IGBT over-current in S phase	None
36	Parallel output current unbalance	None	76	INV IGBT over-current in T phase	None
41	Over temperature	None			

3-10.Warning Indicator






Warning	Icon (flashing)	Alarm
Battery low	 	Beeping every second
Overload	 	Beeping twice every second
Battery unconnected	 	Beeping every second
Over charge	 	Beeping every second
EPO enable	 	Beeping every second
Fan failure/Over temperature	 	Beeping every second
Charger failure	 	Beeping every second
I/P fuse broken	 	Beeping every second
Other warnings(refer to 3-11)		Beeping every second


3-11.Warning Code

Warning code	Warning event	Warning code	Warning event
01	Battery unconnected	21	Line situations are different in parallel system
02	IP Neutral loss	22	Bypass situations are different in parallel system
04	IP phase abnormal	33	Locked in bypass after overload 3 times in 30 minutes
05	Bypass phase abnormal	34	Converter current unbalanced
07	Over charge	3A	Cover of maintain switch is open
08	Low battery	3C	Utility extremely unbalanced
09	Overload	3D	Bypass is unstable
0A	Fan failure	3E	Battery voltage too high
0B	EPO enable	3F	Battery voltage unbalanced
0D	Over temperature	40	Charger short circuited
0E	Charger failure		

4. Trouble Shooting

If the UPS system does not operate correctly, please solve the problem by using the table below.

Symptom	Possible cause	Remedy
No indication and alarm in the front display panel even though the mains is normal.	The AC input power is not connected well.	Check if input cable firmly connected to the mains.
The icon  and the warning code EP flash on LCD display and alarm beeps every second.	EPO function is activated. At this time, the EPO switch is in "OFF" status or the jumper is open.	Set the circuit in closed position to disable the EPO function.
The icon  and BATT. FAULT flash on LCD display and alarm beeps every second.	The external or internal battery is incorrectly connected.	Check if all batteries are connected well.
The icon  and OVER LOAD flash on LCD display and alarm beeps twice every second.	UPS is overload.	Remove excess loads from UPS output.
	UPS is overloaded. Devices connected to the UPS are fed directly by the electrical network via the Bypass.	Remove excess loads from UPS output.
	After repetitive overloads, the UPS is locked in the Bypass mode. Connected devices are fed directly by the mains.	Remove excess loads from UPS output first. Then shut down the UPS and restart it.
Fault code is shown as 43. The icon OVER LOAD lights on LCD display and alarm beeps continuously.	UPS is overload too long and becomes fault. Then UPS shut down automatically.	Remove excess loads from UPS output and restart it.
Fault code is shown as 14, 15, 16, 17, 18 or 19, the icon SHORT lights on LCD display, and alarm beeps continuously.	The UPS shut down automatically because short circuit occurs on the UPS output.	Check output wiring and if connected devices are in short circuit status.
Other fault codes are shown on LCD display and alarm beeps continuously.	A UPS internal fault has occurred.	Contact your dealer
Battery backup time is shorter than nominal value	Batteries are not fully charged	Charge the batteries for at least 7 hours and then check capacity. If the problem still persists, consult your dealer.
	Batteries defect	Contact your dealer to replace the battery.
The icon  and  flash on LCD display and alarm beeps every second.	Fan is locked or not working; or the UPS temperature is too high.	Check fans and notify dealer.

Symptom	Possible cause	Remedy
<p>The warning code 02 and the icon  flash on LCD display. The alarm beeps every second.</p>	<p>The input neutral wire is disconnected.</p>	<p>Check and correct the input neutral connection. If the connection is ok and the alarm is still displaying, please refer to the LCD setting section, to enter the neutral loss check menu, to see if the parameter3 is "CHE", if it is, please press the "Enter" key firstly to make the "CHE" flash and press the "Enter" key secondly to make the UPS clear the alarm. If the warning still exists, please check input fuses of L2 and L3.</p>
	<p>The L2 or L3 input fuse is broken.</p>	<p>Replace the fuse.</p>

5. Storage and Maintenance

5-1. Storage

Before storing, charge the UPS at least 7 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

Storage Temperature	Recharge Frequency	Charging Duration
-25°C - 40°C	Every 3 months	1-2 hours
40°C - 45°C	Every 2 months	1-2 hours

5-2. Maintenance



The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.



Even after the unit is disconnected from the mains, components inside the UPS system are still connected to the battery packs which are potentially dangerous.



Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capability capacitor such as BUS-capacitors.



Only persons are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.



Verify that no voltage between the battery terminals and the ground is present before maintenance or repair. In this product, the battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground.



Batteries may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.



When replace the batteries, install the same number and same type of batteries.



Do not attempt to dispose of batteries by burning them. This could cause battery explosion. The batteries must be rightly deposited according to local regulation.



Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.



Please replace the fuse only with the same type and amperage in order to avoid fire hazards.



Do not disassemble the UPS system.

6. Specifications

400V

MODEL	30K(L) 30K(L) DUAL	40K(L) 40K(L) DUAL	60KL 60KLA DUAL	80KL 80KLA DUAL	
CAPACITY*	30KVA / 27KW	40KVA / 36KW	60KVA / 54KW	80KVA / 72KW	
INPUT					
Voltage Range	Low Line Loss	110 VAC(Ph-N) \pm 3 % at 50% Load 176 VAC(Ph-N) \pm 3 % at 100% Load			
	Low Line Comeback	Low Line Loss Voltage + 10V			
	High Line Loss	300 VAC(L-N) \pm 3 % at 50% Load 276 VAC(L-N) \pm 3 % at 100% Load			
	High Line Comeback	High Line Loss Voltage - 10V			
Frequency Range	46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system				
Phase	3 Phase with Neutral				
Power Factor	\geq 0.99 at 100% Load				
OUTPUT					
Phase	3 Phase with Neutral				
Output voltage	360/380/400/415VAC (Ph-Ph)				
	208*/220/230/240VAC (Ph-N)				
AC Voltage Regulation	\pm 1%				
Frequency Range (Synchronized Range)	46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system				
Frequency Range (Batt. Mode)	50 Hz \pm 0.1 Hz or 60Hz \pm 0.1 Hz				
Overload	AC mode	100%~110%: 10min; 110%~130%: 1min; >130% : 1sec			
	Battery mode	100%~110%: 30sec; 110%~130%: 10sec; >130% : 1sec			
Current Crest Ratio	3:1 max				
Harmonic Distortion	\leq 2 % @ 100% Linear Load; \leq 5 % @ 100% Non-linear Load				
Transfer Time	Line \leftrightarrow Battery	0 ms			
	Inverter \leftrightarrow Bypass	0 ms (When phase lock fails, <4ms interruption occurs from inverter to bypass)			
	Inverter \leftrightarrow ECO	<10 ms			
EFFICIENCY					
AC mode	94%				
Battery Mode	93.5%				
BATTERY					
Standard Model	Type	12 V / 7 Ah	12 V / 9 Ah	N/A	
	Numbers	(16+16)pcs x 2 strings			
	Recharge Time	9 hours recover to 90% capacity			
	Charging Current (max)	2.0 A \pm 10% (Recommended) 1.0/2.0/3.0/4.0A \pm 10% (Adjustable)			
	Charging Voltage	+/-218 VDC \pm 1%			
Long-run Model	Type	Depending on applications			
	Numbers	32 ~ 40 (adjustable)			
	Charging Current(max.)	1.0/2.0/3.0/4.0A \pm 10% (Adjustable) Parallelable up to 3 charger boards to reach 12A maximum	2.0/4.0/6.0/8.0A \pm 10% (Adjustable) Parallelable up to 3 sets of dual charger boards to reach 24A maximum		
	Charging Voltage	+/- 13.65 VDC * N \pm 1% (N = 16~20)			
PHYSICAL					
Standard Model	Dimension, D X W X H mm	815 x 300 x 1000	815 x 300 x 1000	N/A	
	Net Weight (kgs)	225/230	250/260		
Long-run Model	Dimension, D X W X H mm	815 x 300 x 1000	815 x 300 x 1000	790 x 360 x 1010	790 x 360 x 1010
	Net Weight (kgs)	60/65	61/71	108/112	113/117
ENVIRONMENT					
Operation Temperature	0 ~ 40°C (the battery life will down when > 25°C)				
Operation Humidity	<95 % and non-condensing				
Operation Altitude**	<1000m**				
Acoustic Noise Level	Less than 60dB @ 1 Meter	Less than 70dB @ 1 Meter	Less than 70dB @ 1 Meter	Less than 75dB @ 1 Meter	
MANAGEMENT					
Smart RS-232 or USB	Supports Windows® 2000/2003/XP/Vista/2008/7/8/10, Linux, Unix, and MAC				
Optional SNMP	Power management from SNMP manager and web browser				

* Derate capacity to to 90% when the output voltage is adjusted to 208VAC.

** If the UPS is installed or used in a place where the altitude is above than 1000m, the output power must be derated 1% per 100m.

***Product specifications are subject to change without further notice.

208V

MODEL		15K(L) 15K(L) DUAL	20K(L) 20K(L) DUAL	30KL 30KL DUAL	40KL 30KL DUAL
CAPACITY*		15KVA / 13.5KW	20KVA / 18KW	30KVA / 27KW	40KVA / 36KW
INPUT					
Voltage Range	Low Line Loss	70 VAC(Ph-N) \pm 3 % at 50% Load 88 VAC(Ph-N) \pm 3 % at 100% Load			
	Low Line Comeback	Low Line Loss Voltage + 5V			
	High Line Loss	156 VAC(L-N) \pm 3 % at 50% Load 146 VAC(L-N) \pm 3 % at 100% Load			
	High Line Comeback	High Line Loss Voltage - 5V			
Frequency Range		46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system			
Phase		3 Phase with Neutral			
Power Factor		\geq 0.99 at 100% Load			
OUTPUT					
Phase		3 Phase with Neutral			
Output voltage		208/220VAC (Ph-Ph)			
		120/127VAC (Ph-N)			
AC Voltage Regulation		\pm 1%			
Frequency Range (Synchronized Range)		46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system			
Frequency Range (Batt. Mode)		50 Hz \pm 0.1 Hz or 60Hz \pm 0.1 Hz			
Overload	AC mode	100%~110%: 10min; 110%~130%: 1min; >130% : 1sec			
	Battery mode	100%~110%: 30sec; 110%~130%: 10sec; >130% : 1sec			
Current Crest Ratio		3:1 max			
Harmonic Distortion		\leq 2 % @ 100% Linear Load; \leq 4 % @ 100% Non-linear Load (PF \geq 0.8)			
Transfer Time	Line \leftrightarrow Battery	0 ms			
	Inverter \leftrightarrow Bypass	0 ms (When phase lock fails, <4ms interruption occurs from inverter to bypass)			
	Inverter \leftrightarrow ECO	<10 ms			
EFFICIENCY					
AC mode		94%			
Battery Mode		93.5%			
BATTERY					
Standard Model	Type	12 V / 7 Ah	12 V / 9 Ah	N/A	
	Numbers	(8+8)pcs x 2 strings			
	Recharge Time	9 hours recover to 90% capacity			
	Charging Current(max.)	2.0 A \pm 10% (Recommended) 1.0/2.0/3.0/4.0A \pm 10% (Adjustable)			
	Charging Voltage	+/-109 VDC \pm 1%			
Long-run Model	Type	Depending on applications			
	Numbers	16 ~ 20 (adjustable)			
	Charging Current(max.)	1.0/2.0/3.0/4.0A \pm 10% (Adjustable) Parallelable up to 3 charger boards to reach 12A maximum	2.0/4.0/6.0/8.0A \pm 10% (Adjustable) Parallelable up to 3 charger boards to reach 24A maximum		
	Charging Voltage	+/- 13.65 VDC * N \pm 1% (N = 8~10)			
PHYSICAL					
Standard Model	Dimension, D X W X H mm	815 x 300 x 1000	815 x 300 x 1000	N/A	
	Net Weight (kgs)	152	117		
Long-run Model	Dimension, D X W X H mm	815 x 300 x 1000	815 x 300 x 1000	790 x 360 x 1010	790 x 360 x 1010
	Net Weight (kgs)	60/65	61/71	108/112	113/117
ENVIRONMENT					
Operation Temperature		0 ~ 40°C (the battery life will down when > 25°C)			
Operation Humidity		<95 % and non-condensing			
Operation Altitude**		<1000m**			
Acoustic Noise Level		Less than 60dB @ 1 Meter	Less than 70dB @ 1 Meter	Less than 70dB @ 1 Meter	Less than 75dB @ 1 Meter
MANAGEMENT					
Smart RS-232 or USB		Supports Windows® 2000/2003/XP/Vista/2008/7/8/10, Linux, Unix, and MAC			
Optional SNMP		Power management from SNMP manager and web browser			

* If the UPS is installed or used in a place where the altitude is above than 1000m, the output power must be derated 1% per 100m.

**Product specifications are subject to change without further notice.

İTHALATÇI / İMALATÇI FİRMANIN

UNVANI : TESCOM ELEKTRONİK SANAYİ ve TİCARET A.Ş

MERKEZ

ADRESİ : Dudullu Organize Sanayi Bölgesi 2.Cadde No:7 Zemin Kat Ümraniye / İSTANBUL

TEL / TELEFAKS : 0850 277 88 77 / 0216 527 28 18

İZMİR Bölge Müdürlüğü (Fabrika ve Yurtdışı Satış Ofisi)

ADRESİ : 10009 sk. No:1 , Ulukent Sanayi Sitesi 35660 Menemen – İZMİR

TEL / TELEFAKS : 0232 833 36 00 pbx / 0232 833 37 87

WEB : <http://www.tescom-ups.com>

e-mail: info@tescom-ups.com

ÜRETİM YERİ

VOLTRONIC POWER TECHNOLOGY CORP.

1-4F Building 5, YuSheng Industrial Park No.467

Section Xixiang, National highway 107, Xixiang, Bao An District,
Shenzhen,China

YETKİLİ SERVİS İSTASYONUNUN

SIRA NO	UNVANI	ADRESİ	YETKİLİSİNİN ADI SOYADI	TEL/TELEFAKS
1	TESCOM ELEKTRONİK SANAYİ VE TİCARET AŞ.	DUDULLU ORGANİZE SANAYİ BÖLGESİ 2.CADDE NO.7 ZEMİN KAT ÜMRANIYE / İSTANBUL	ALİCAN YILMAZ	0850 277 8877
2	ATILGAN MÜHENDİSLİK KESİNTİSİZ GÜÇ KAYNAKLARI SATIŞ VE ONARIM SERVİSİ MEHMET ZÖHRE SAHİS	HUZUREVLERİ MH. 77232 SK. BİLAL İŞLEK APT. NO:24 ÇUKUROVA-ADANA	CEM ÖNÜRDEŞ	0322 458 69 17
3	ZK ENERJİ SİSTEMLERİ SANAYİ VE TİCARET LTD.ŞTİ	MÜCAHİTLER MAH.52025 NOLU SK. NO:9/A ŞEHİTKAMİL / GAZİANTEP	ZEKİ KAYAR	0342 360 8400
4	ATILAY ELEKTRONİK ELEKTRİK MEDİKAL İNŞ.TİC.VE SAN LTD.ŞTİ.	ALİPAŞA MAHALLESİ KONGRE CADDESİ HASIRHAN PASAJI ÜST ZEMİN KAT NO : 87 YAKUTİYE / ERZURUM	ALPASLAN ATILAY	0442 213 30 60
5	GÜLKOM MÜH.BİL. GIDA ELK. SAN. VE TİC. LTD.ŞTİ	İNÖNÜ MAH. YAVUZ SELİM BULVARI RAİF BEY APT.NO:305/2 ORTA HİSAR / TRABZON	ENGİN SEZGİN	0462 326 6142
6	GESİS GENEL ELEK. ELEKT. SİSTEMLERİ SAN. VE TİC. LTD. ŞTİ.	Zafer Mah.Yeni sanayi Sitesi Sanayi Alt yol M8 Blok No:9 ÇORLU / TEKİRDAĞ	İLKAY DUDU	0282 673 48 96
7	DIALOG ELEKT. ELEK. İLETİŞİM HİZ.VE OTOMASYON DAN.PROJE TAAHHÜT SAN. VE TİC.LTD.ŞTİ	KIRCAALİ MAH. GAZCILAR CAD. ANAFARTA SOK.NO:5/B BURSA	TİMUÇİN KARAER	0224 253 42 11
8	OBA KESİNTİSİZ GÜÇ KAYNAKLARI ELEKTRİK VE ELEKTRONİK SAN. TİC.	Keykubat Mahallesi Osman Kavuncu Blv. No: 345 A MELİKGAZİ/ KAYSERİ	ALİ DEMİRBİLEK ONUR CANAN	0352 233 4223
9	TESCOM ELEKTRONİK SANAYİ VE TİCARET AŞ.	29 EKİM MAHALLESİ 10009 SK. NO: 1 MENEMEN / İZMİR	YÜKSEL ÖZCAN	0850 277 8877
10	TESCOM ELEKTRONİK SANAYİ VE TİCARET AŞ.	İvedik OSB Melih Gökçek Bulvarı 1122. Cad. Maxivedik İş Merkezi No:20/106 Yenimahalle - ANKARA	BEKİR CAN ŞAHİN	0312 476 24 37

AGKK14710 06/2022